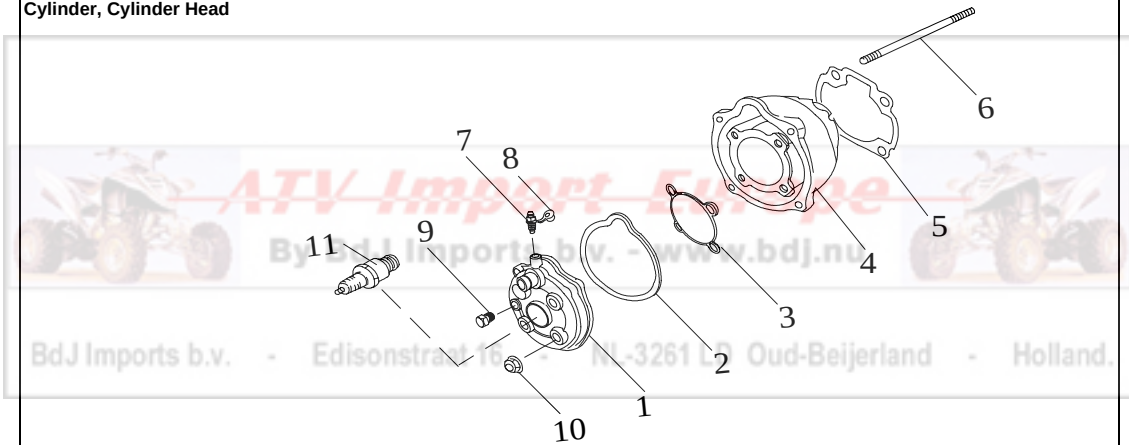 
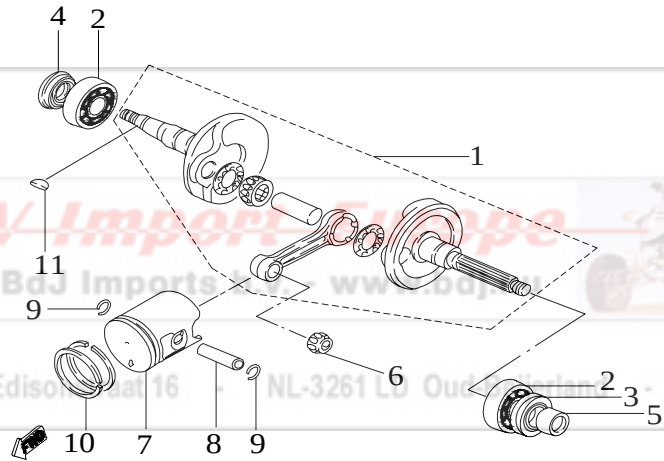 


E-1**Cylinder, Cylinder Head**

Item	Part No.	Part Name	Q'ty
1	12200-E01-000	Head,Cylinder	1
2	12300-E01-000	Ring,Oil	1
3	12310-E01-000	Ring,Oil	1
4	12100-E01-000	Cylinder	1
5	12191-E01-010	Gasket,Cylinder	1
6	P91000-07118	Bolt,Stud	4
7	15872-E01-000	Bolt,Leaking	1
8	15873-E01-000	Cap,Rubber	1
9	15240-E01-000	Sensor,Temperature	1
10	P92120-07-10C	Hex.Acorm Washer Face Nut	4
11	98069-BR8HSA-R BR8-HSA-R	Plug,Spark	1

E-2

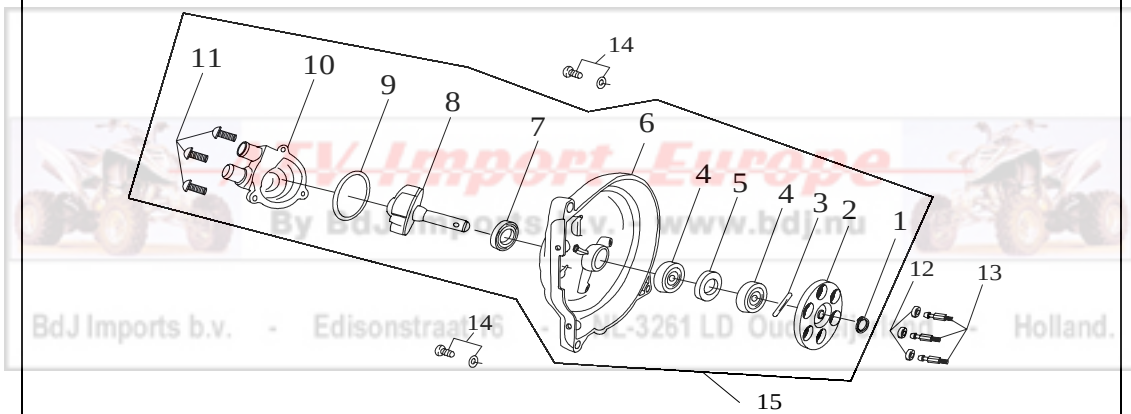 
Piston, Crankshaft



Item	Part No.	Part Name	Q'ty
1	13000-E01-000	Crankshaft Ass'y	1
2	95100-6204C3	Ball Bearing, Crankshaft	2
3	96100-204208	Seal,Oil	1
4	96100-203006	Seal,Oil	1
5	13200-E01-000	Collar,L Crank Case	1
6	95200-KBK12	Bearing, Needle	1
7	13300-E01-000	Piston(std.)	1
8	13400-E01-000	Pin, Piston	1
9	13410-E01-000	Clip, Piston Pin	2
10	13310-E01-000	Rings, Piston (std.)	1
11	13010-E01-000	Key, Woodruff	1

E-3

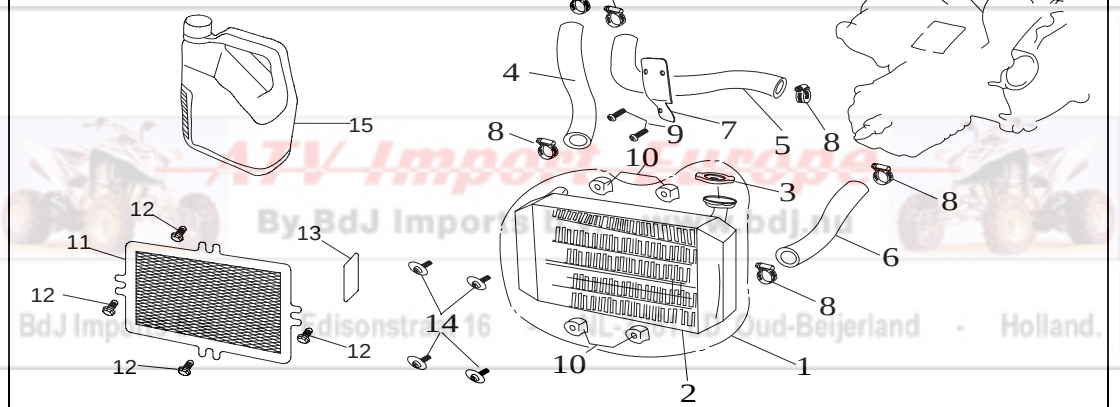 
Pump Ass'y, Liquid



Item	Part No.	Part Name	Q'ty
1	93406-STW08	CirCilp	1
2	15211-E01-000	Orive Wheel Pump	1
3	94002-030198	Pin	1
4	95100-608LLU	Ball, Bearing	2
5	15216-E01-000	collar	1
6	15212-E01-000	Body, Water Pump	1
7	96100-101804	Seal, Oil	1
8	15213-E01-000	Rotor Ass'y , Pump	1
9	96200-525020	Oil-Ring	1
10	15215-E01-000	Cover, Water Pump	1
11	P93700-05016	Bolt, Pan head	3
12	31130-E01-000	Plug, Rubber	3
13	15875-E01-000	Bolt, Drive Wheel	3
	P93100-06013-01W	Washer, Plain	3
14	P91760-06020-05W	Bolt, Hex Socket	2
15	15200-E01-000	Pump Ass'y, Liquid	1

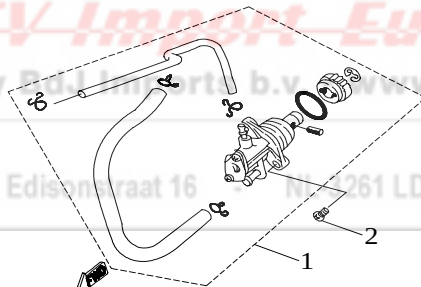 
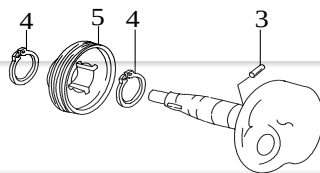 
E-4

Radiator

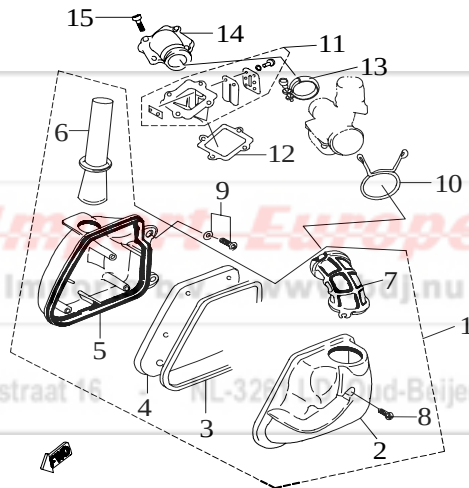 


Item	Part No.	Part Name	Q'ty
1	15230-A01-000	Radiator Assembly	1
2	15231-A01-000	Radiator	1
3	15232-A01-000	Cap, Radiator	1
4	15233-A02-010	Hose A, Liquid	1
5	15233-162424	Hose B, Liquid	1
6	15233-A02-000	Hose C, Liquid	1
7	17211-E01-000	Cover, Dust-Proof	1
8	97412-A01-000	Clip	6
9	P93700-05010	Bolt, Pan Phillips	2
10	15233-A01-000	Grommet, Radiator	4
11	15236-A01-000	Mesh, Radiator	1
12	91700-06012-10G	Bolt, Flange	4
13	72116-A01-000	Warning Decal, Radiator	1
14	91750-06020-10G	Bolt, Flange	4
15	15235-A01-000	Anti-freezer	0

E-5
Oil Pump



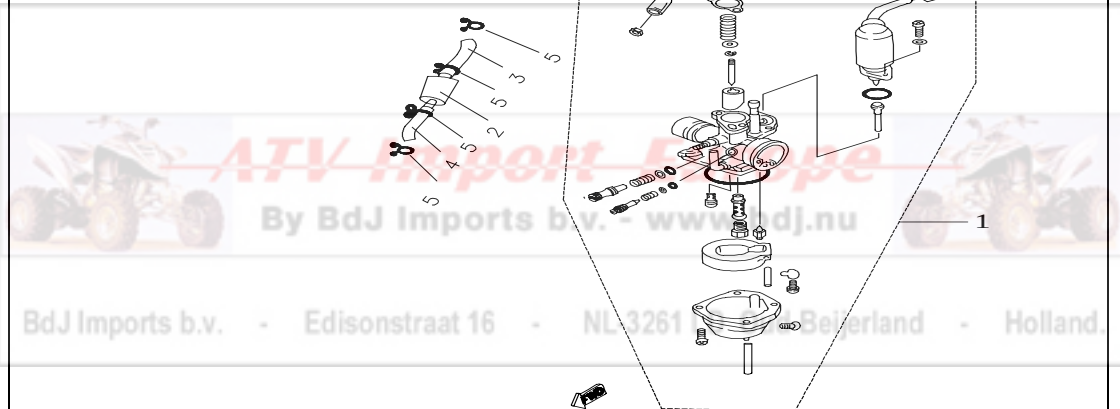 
Item	Part No.	Part Name	Q'ty
1	15100-E01-000	Pump, Oil	1
2	P93700-05016	Bolt, Pan head	2
3	94002-031108	Pin	1
4	93406-STW19	Circlip	2
5	15110-E01-000	Dear, Pump Drive	1

E-6**Air Cleaner, Reed Valve**

Item	Part No.	Part Name	Q'ty
1	17300-E01-000	Air Clenaer Ass'y	1
3	17320-E01-000	Filter Element, Air Cleaner	1
4	17334-E01-000	Screw, Tapping	3
9	P93100-06013-01W	Washer, Plain	2
10	17333-E01-000	Clip	1
11	14710-E01-000	Reed Valve Ass'y	1
12	14711-E01-000	Gasket, Reed Valve	1
14	16410-E01-000	Manifold, Intake	1
15	P91760-06020-05W	Hex. Socket Bolt	1

E-7

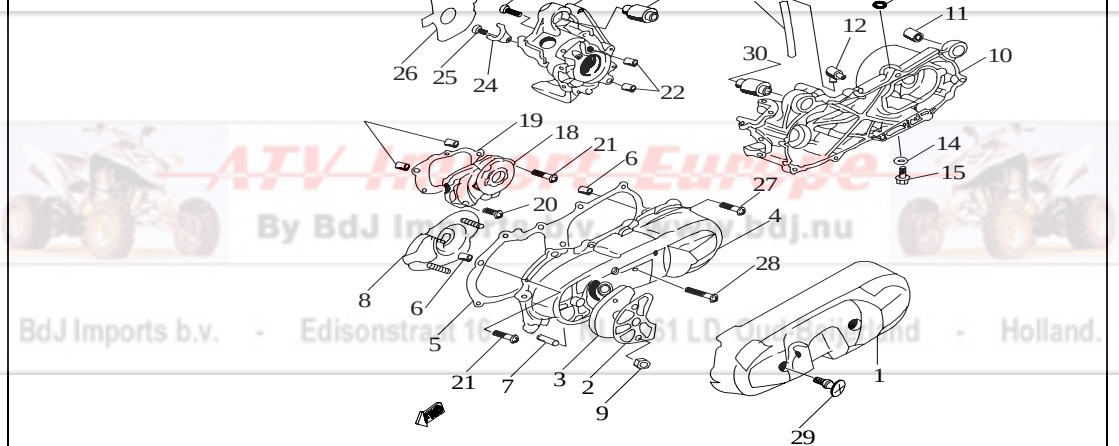 
Carburetor



Item	Part No.	Part Name	Q'ty
1	16100-E01-010	Carburetor Ass'y	1
2	16300-E01-000	Filter, Fuel	1
3	16310-06150	Hose, Fuel L=150mm	1
4	16310-06070	Hose, Fuel L=70mm	1
5	97410-A01-000	Clip, Tube	4

E-8

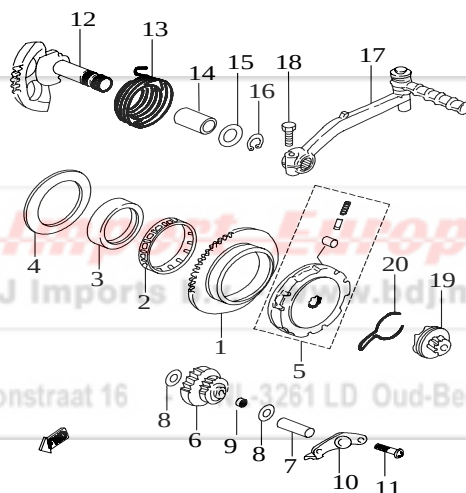 
Crankcase



Item	Part No.	Part Name	Q'ty
1	11341-E01-000	Protector, L. Crankcase Cover	1
2	11342-E01-000	Guide, Air Filter	1
3	11343-E01-000	Filter Element, L. Crankcase	1
4	11340-E01-000	Cover, L. Crankcase	1
5	11395-E01-000	Gasket, L. Crankcase	1
6	94001-081014	Pin, Dowel	4
7	11344-E01-000	Shaft	1
8	11345-E01-000	Fixed Plate, Filter Element	1
9	P92120-06-10C	Hex. Acorm Washer Face	3
10	11200-E01-000	Crankcase, L.	1
11	93507-082021	Bush	1
12	11210-E01-000	Breather	1
13	11211-E01-000	Hose,Breather	1
14	P93101-E01-000	Washer, Copper	1
15	P91700-08016-12B	Hex.Washer Face Bolt	1
16	96200-138024	O-Ring	1
17	11212-E01-000	Plug, Oil	1
18	11400-E01-000	Cover, Transmission	1
19	11410-E01-000	Gasket, Transmission	1
20	P91760-06020-05W	Hex. Socket Bolt	3
21	P91760-06035-05W	Hex. Socket Bolt	10
22	94001-101216	Pin, Dowel	2
23	11100-E01-000	Crankcase, R.	1
24	11110-E01-000	Holder	1
25	P91760-06010-05W	Hex. Socket Bolt	1
26	31121-E01-000	Gasket, A.C.G	1
27	P91760-06025-05W	Hex. Socket Bolt	8
28	P91760-06065-05W	Hex. Socket Bolt	1
29	11346-E01-000	Bolt, Special	2
30	93506-123538	Bush	2

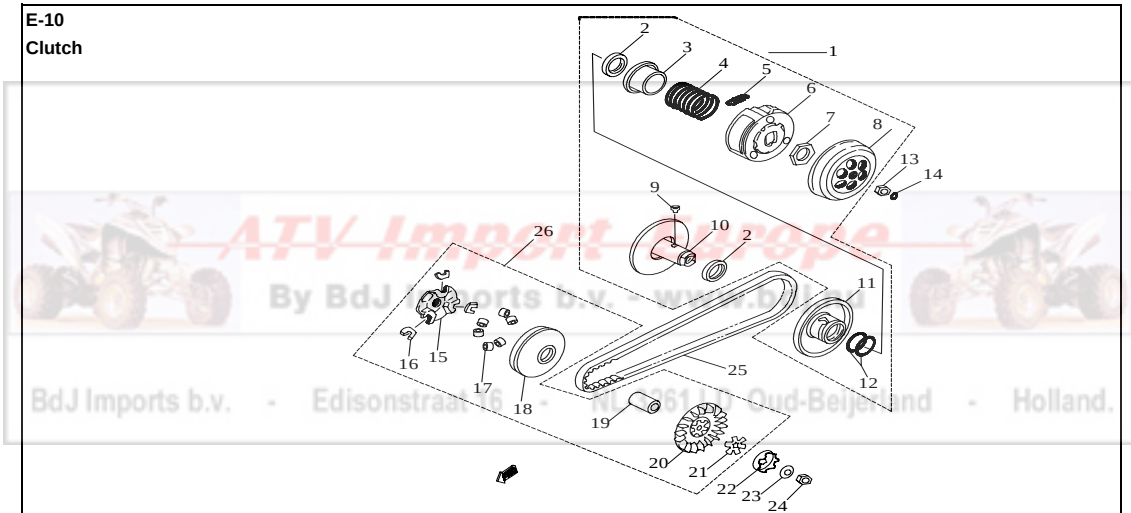 
E-9

Starter

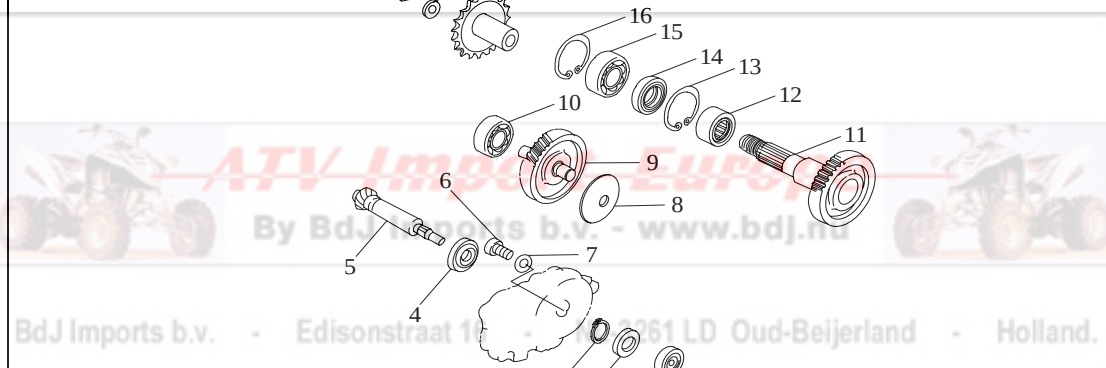 


Item	Part No.	Part Name	Q'ty
1	22110-E01-000	Wheel, Starter	1
2	95200-555912	Bearing, Needle	1
3	11213-E01-000	Boss	1
4	P93100-55076-05B	Washer, Plate	1
5	22100-E01-000	Wheel, Starter	1
6	22120-E01-000	Idle Gear Ass'y	1
7	11344-E01-000	Shaft	1
8	P93100-08216-02C	Washer, Plate	2
9	95200-081210	Bearing, Needle	1
10	22121-E01-000	Plate, Idle Gear	1
11	P91760-06010-05W	Hex. Socket Bolt	2
12	28211-E01-000	Kick Shaft Ass'y	1
13	28261-E01-000	Spring, Torsion	1
14	28251-E01-000	Bush, Kick Shaft	1
15	P93100-15228-01C	Washer, Plate	1
16	93406-STW15	Circlip	1
17	16105-A01-000	Kick Ass'y	1
18	P91770-06025-10C	Hex. Bolt	1
19	28221-E01-000	Kick Pinion Ass'y	1
20	28222-E01-000	Clip, Kick Pinion	1

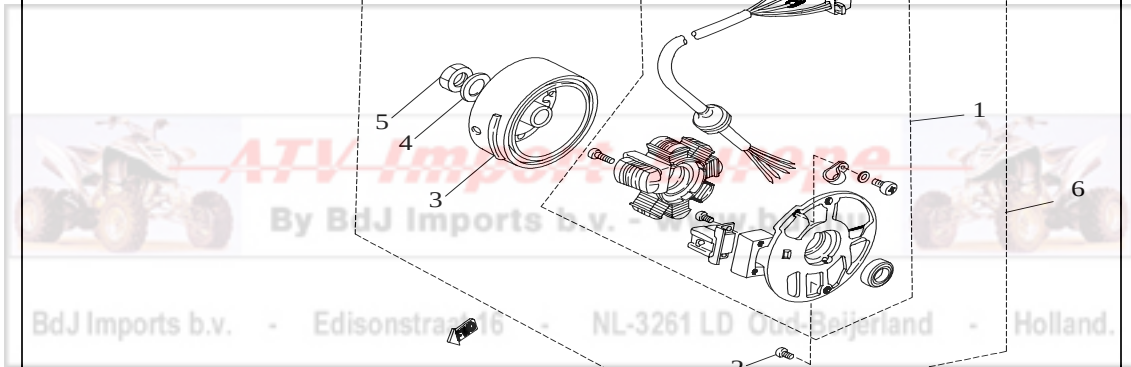 
E-10
Clutch



Item	Part No.	Part Name	Q'ty
1	22300-E01-000	Secondary Sheave Ass'y	1
4	22312-E01-000	Spring, Compression	1
5	22331-E01-000	Spring, Clutch	3
6	22330-E01-000	Carrier Ass'y, Clutch	1
7	22332-E01-000	Nut, Clutch	1
8	22340-E01-000	House. Clutch	1
12	96200-360020	Oil-Ring	2
15	22411-E01-000	Plate, Cam	1
16	22412-E01-000	Slider, Cam Plate	3
17	22413-E01-000	Weight Roller	6
18	22410-E01-000	Sliding Sheave, Primary	1
19	22414-E01-000	Collar	1
20	22420-E01-000	Fixed Sheave, Primary	1
21	22421-E01-000	Waser, Clam	1
22	22422-E01-000	Clutch, Oneway	1
23	P93103-E01-000	Washer, Conical Spring	1
24	P92110-10-17C	Hex. Acorm Nut	1
25	22500-E03-000	Belt, Drive	1
26	22400-E01-000	Sliding Sheave, Ass'y	1

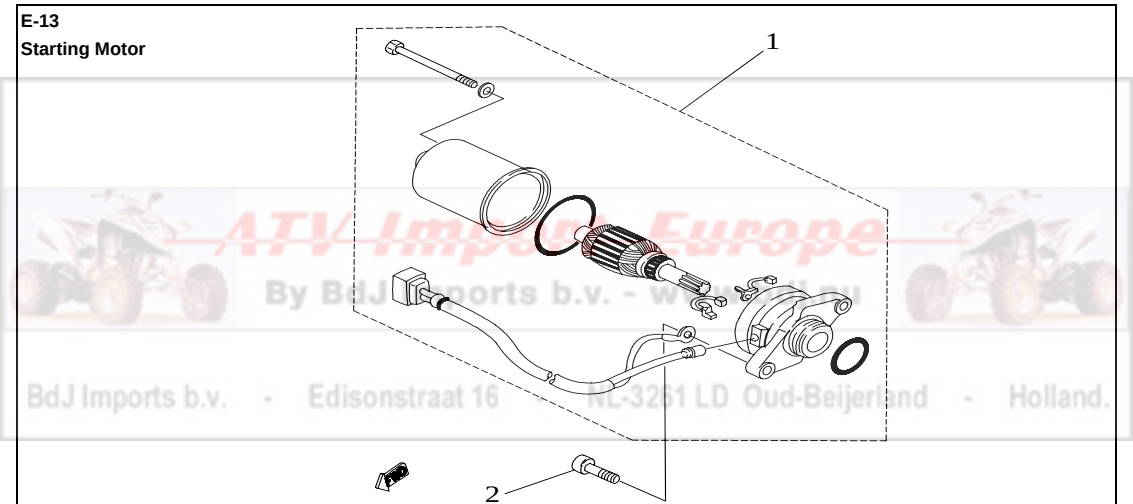 
E-11**Transmission**

Item	Part No.	Part Name	Q'ty
1	95100-638RD	Bearing, Ball	1
2	96100-172855	Seal, Oil	1
3	93406-STW17	Circlip	1
4	95100-6003	Bearing, Ball	1
5	23610-E01-000	Drive Gear, Primary	1
6	P91760-06010-05W	Hex. Socket Bolt	1
7	P93100-06519-12W	Washer, Plate	1
8	P93104-E01-000	Washer, Conical Spring	1
9	23620-E01-000	Main Axle Comp	1
10	95100-6201	Bearing, Ball	1
11	23630-E01-000	Gear, Driven	1
12	95200-HMK2515	Bearing, Needle	1
13	93405-IRTW32	Circlip	1
14	96100-253506	Seal, Oil	1
15	95100-6004LLU	Bearing, Ball	1
16	93405-RTW42	Circlip	1
17	23801-E01-000	Sprocket, Drive	1
18	P93100-14526-02C	Washer, Plate	1
19	P92130-14S-19C	Nut, U Locked	1

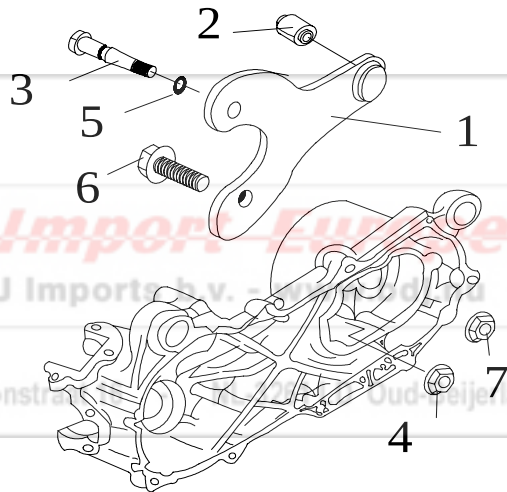 
E-12**Generator**

Item	Part No.	Part Name	Q'ty
1	31120-E03-000	Base Ass'y, Generator	1
2	P91760-06016-05W	Hex. Socket Bolt	2
3	31100-E03-000	Wheel, Fly	1
4	P93100-10022-20C	Washer, Plate	1
5	P92110-10-17C	Hex. Acorn Nut	1
6	31000-E03-000	Generator Ass'y	1

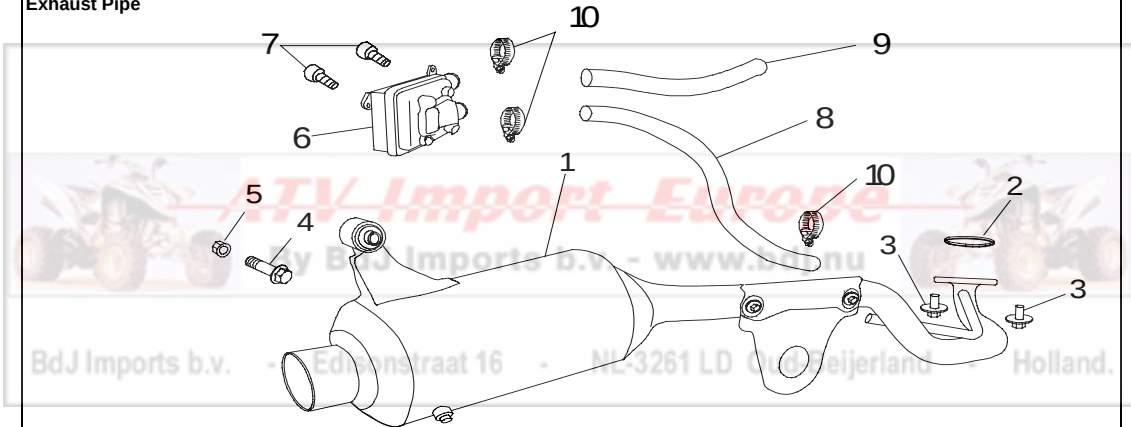 
E-13
Starting Motor



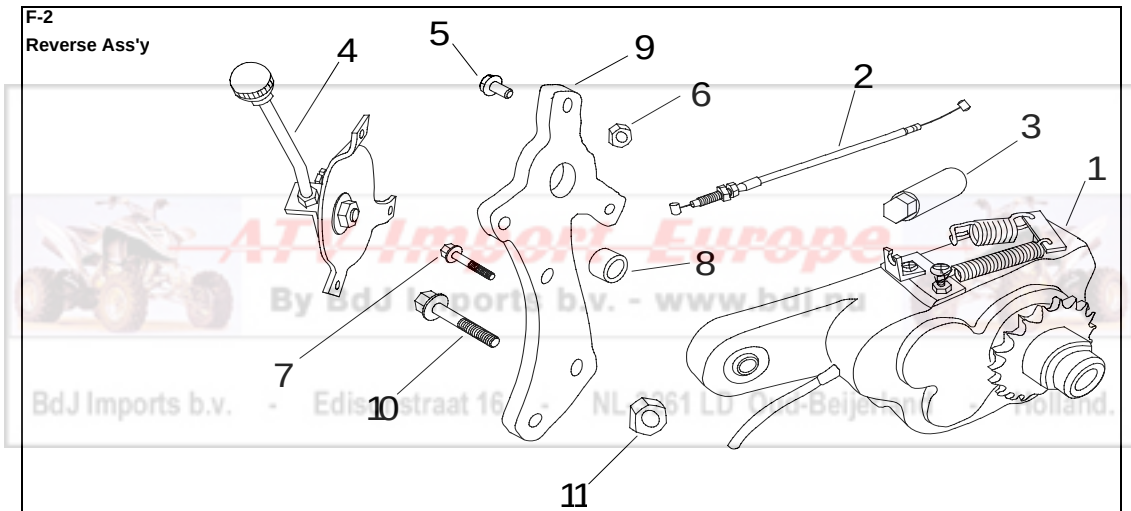 
Item	Part No.	Part Name	Q'ty
1	31200-E01-000	Starting Motor Ass'y	1
2	P91760-06020-05W	Hex. Socket Bolt	2

E-14**Crankcase Bracket**

Item	Part No.	Part Name	Q'ty
1	11347-E01-000	Bracket, Crankcase	1
2	93507-082021	Bush	1
3	11348-E01-000	Shaft, Fix	1
4	P92120-08-12C	Hex. Acorm Washer Face Nut	1
5	96200-075015	O-Ring	1
6	P92100-12040-14C	Hex. Washer Face Bolt	1
7	P92120-12-14C	Hex. Acorm Washer Face Nut	1

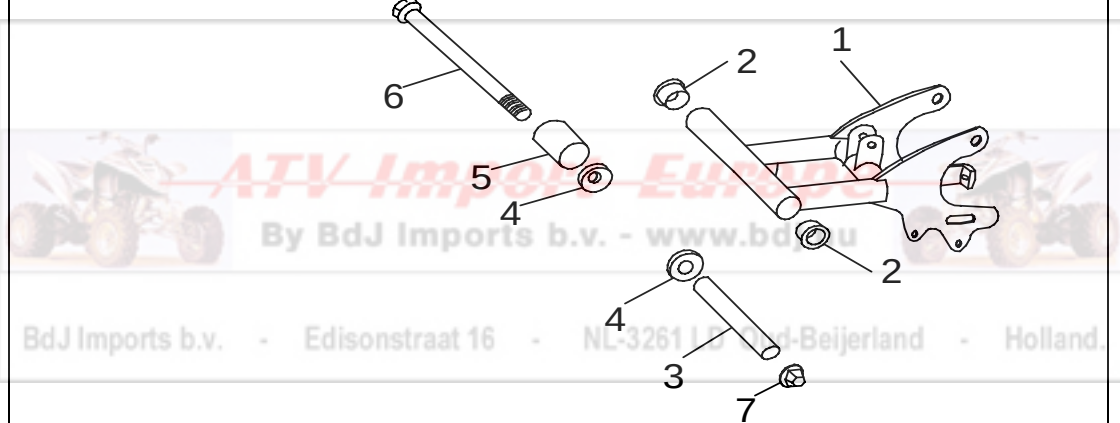 
F-1**Exhaust Pipe**

Item	Part No.	Part Name	Q'ty
1	12160-A01-030	Exhaust Pipe	1
2	12161-A01-000	Washer, Muffler	1
3	91811-A01-000	Bolt, Flange	2
4	91710-10040-14G	Bolt, Flange	1
5	92130-10S-14G	Nut, Insert Lock	1
6	12166-A01-000	Reed Valve Ass'y, Air	1
7	91750-06020-10G	Bolt, Flange	2
8	12168-A01-010	Hose, Air	1
9	12168-A01-020	Hose, Air	1
10	97412-A01-010	Clip(MinHC-1 7)	3

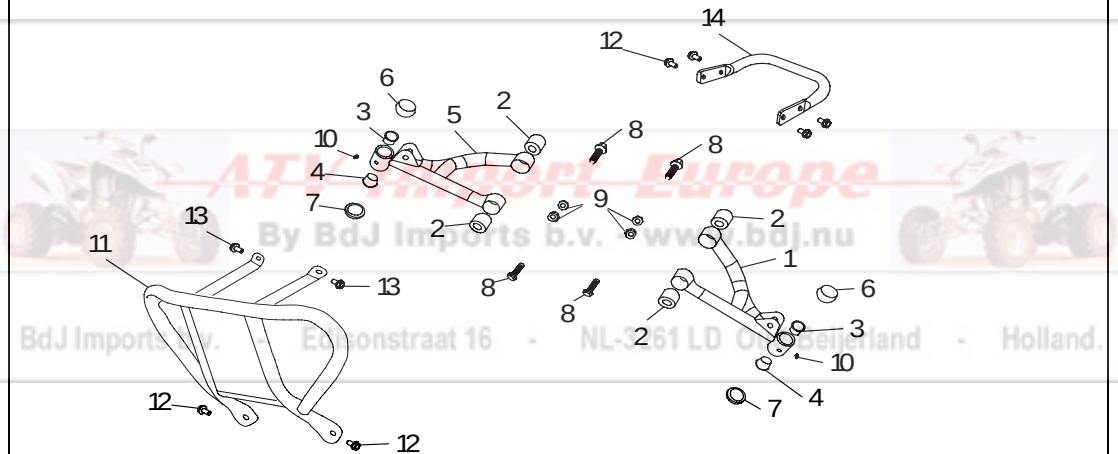 
F-2
Reverse Ass'y


Item	Part No.	Part Name	Q'ty
1	23400-A01-000	Reverse Ass'y	1
2	31230-A01-000	Cable, Reverse	1
3	23405-A01-000	Bolt, Reverse	1
4	23410-A01-000	Shift Stick, Reverse	1
5	91700-06012-10G	Bolt, Flange	3
6	92130-06S-10G	Nut, Self-Locking	3
7	91710-08038-12G	Hex Washer Face Bolt	2
8	93325-A01-000	Spacer, Inner	2
9	83116-A01-010	Bracket, Reverse ®	1
10	91710-10038-14G	Hex Washer Face Bolt	1
11	92130-10S-14G	Nut, Insert Lock	1

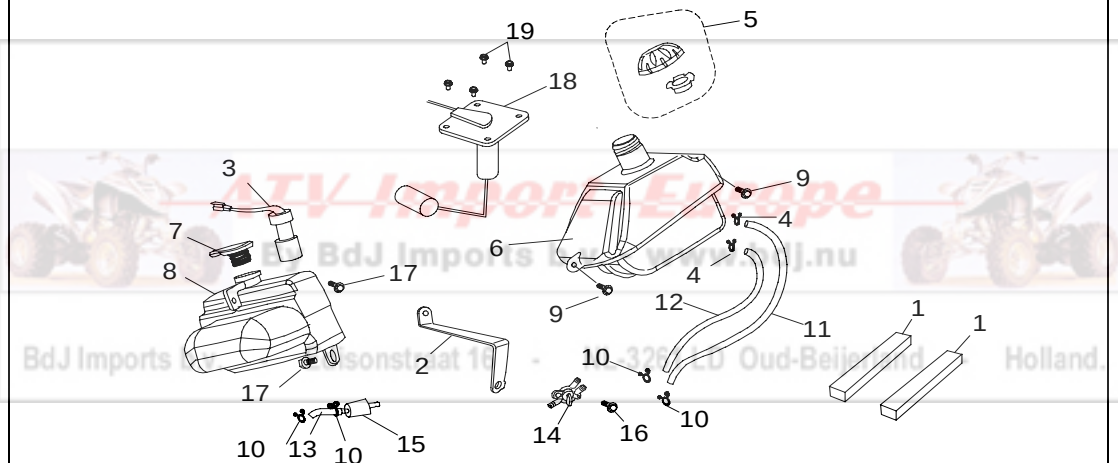 
F-3 Frame			
Item	Part No.	Part Name	Q'ty
1	71000-A02-010	Frame	1
2	93405-3200R	Circlip	1
3	95100-B6002 2RS	Bearing	1
4	93205-A01-000	Couhion, Seat	2
5	71205-A01-000	Engine Holder Seat	2
6	93305-A01-000	Collar (andoised)	1
7	93310-A01-000	Collar(andoised)	1
8	91700-12220-14G	Blot Flange	1
9	91710-08035-12G	Hex Washer Face Bolt	2
10	91700-08012-12G	Bolt, Flange	4
11	92130-12S-17G	Nut, Insert Lock	1
12	15105-A01-001	Aux Liquid Bottle	1
13	71310-A01-000	Aux Liquid Bottle Holder	1
14	15106-A01-000	Aux Liquid Bottle Connector	1
15	15108-A01-000	Aux Liquid Bottle Hose (short)	1
16	15107-A01-000	Aux Liquid Bottle Hose(long)	1
17	91760-06012-05G	Screw, Hex.Socker	2
18	93300-08020-07	Spacer	2

F-4
Awing Arm Footrest


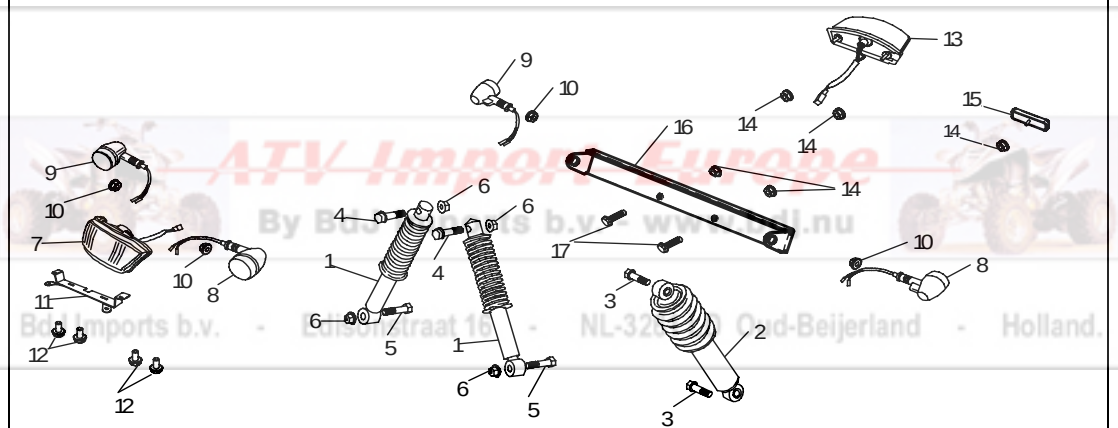 
Item	Part No.	Part Name	Q'ty
1	82105-A01-00A	Swing Arm	1
2	95305-A01-000	Bushing Contain Oil	2
3	93315-A01-000	Swing Arm Spacer Tube	1
4	93105-A01-100	Seal cover,swing Arm	2
5	93210-A01-000	Rubber Sleeve	1
6	91700-14290-19G	Bolt, Flange	1
7	92130-14S-19G	Nut, Insert Lock	1

F-5
Fend Bur Rocker Arm


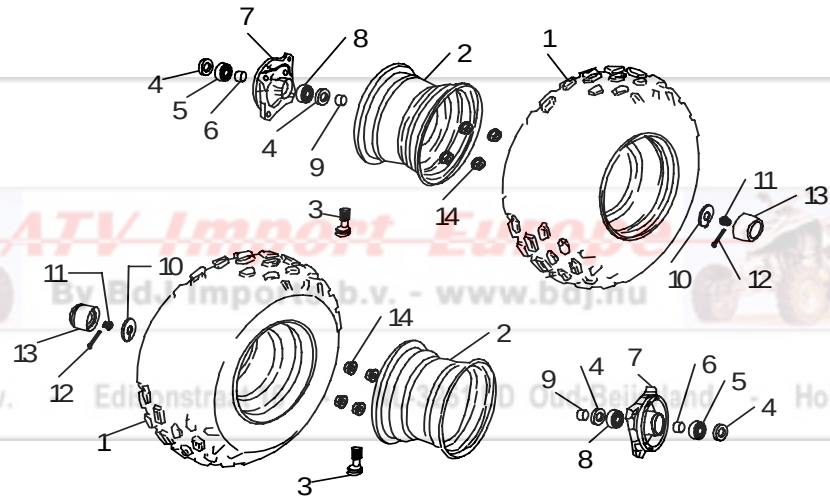 
Item	Part No.	Part Name	Q'ty
1	81105-A02-000	A-Arm, Left (black)	1
2	93505-A01-100	Bush	4
3	95310-A01-000	Bush, Contion Oil Up	2
4	95315-A01-000	Bush, Contion oil Down	2
5	81110-A02-000	A-Arm, Right (black)	1
6	93605-A01-000	Waterproof Rubber	2
7	93610-A01-000	Dustproof Rubber	2
8	91700-10048-14G	Bolt, Flange	4
9	92130-10S-14G	Nut, Insert Lock	4
10	91805-A01-000	Grease Valve	2
11	71211-A01-020	Grill	1
12	91700-08012-12G	Bolt, Flange	6
13	91750-06016-10G	Bolt ,Flange	2
14	71235-A01-010	Rear Hand Grip	1

F-6
Fuel Tank Oil Tank


Item	Part No.	Part Name	Q'ty
1	12110-A02-000	Sponage	2
2	12220-A01-000	Bracket, Support	1
3	12210-A01-000	Gauge, Oil Level	1
4	97411-A01-000	Clip	2
5	12150-A01-010	Cap Assembly, Fuel tank	1
6	12100-A01-010	Tank, Fuel	1
7	12205-A01-001	Cap, Oil Tank	1
8	12200-A01-001	Tank, Oil	1
9	91750-06016-10G	Bolt, Flange	2
10	97410-A01-000	Clip, Tube	4
11	12310-A01-000	Tube A, Fuel	1
12	12311-A01-000	Tube B, Fuel	1
13	12315-A01-000	Tube A, Oil	1
14	12105-A01-000	Valve, Fuel	1
15	12215-A01-000	Oil Filter	1
16	91700-06012-10G	Bolt, Flange	1
17	91821-A01-000	Bolt, Hex Ladder(Short)	2
18	12115-A01-000	Gauge, Fuel Tank	1
19	91700-05010-08K	Bolt, Hex. Washer Plate	4

F-7
Shock Absorber Lamp


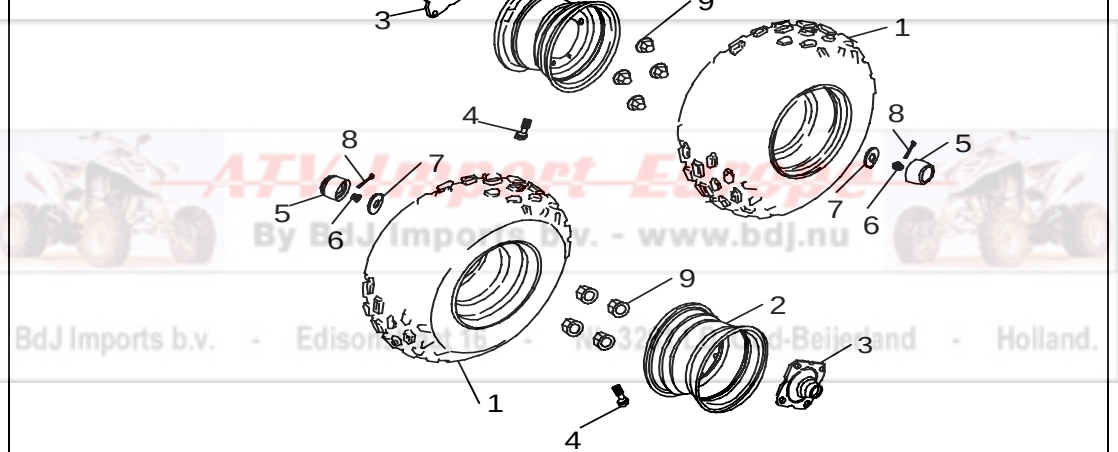 
Item	Part No.	Part Name	Q'ty
1	81200-A01-00A	Shock Absorber, Front	2
2	82200-A01-00A	Shock Absorber, Rear	1
3	91710-10038-14G	Bolt, Flange	2
4	91700-10040-14G	Bolt, Flange	2
5	91770-10038-14G	Blot	2
6	92130-10S-14G	Nut, Insert Lock	4
7	62205-A01-000	Head Lamp Comp	1
8	62230-A01-000	Singal Light, L. Rear	2
9	62225-A01-000	Signal Light, R. Rear	2
10	92120-10-14G	Nut,Flange	4
11	62206-A01-000	Head Lamp Bracket	1
12	91825-A01-010	Philips Screw, Tapping	4
13	62210-A01-000	Tail Light Comp	1
14	92130-06S-10G	Nut, Self-Locking	5
15	62240-A01-000	Reflector, Rear	1
16	83117-A01-000	Clip, Signal Light	1
17	91700-06012-10G	Bolt, Flange	2

F-8
Front Tire


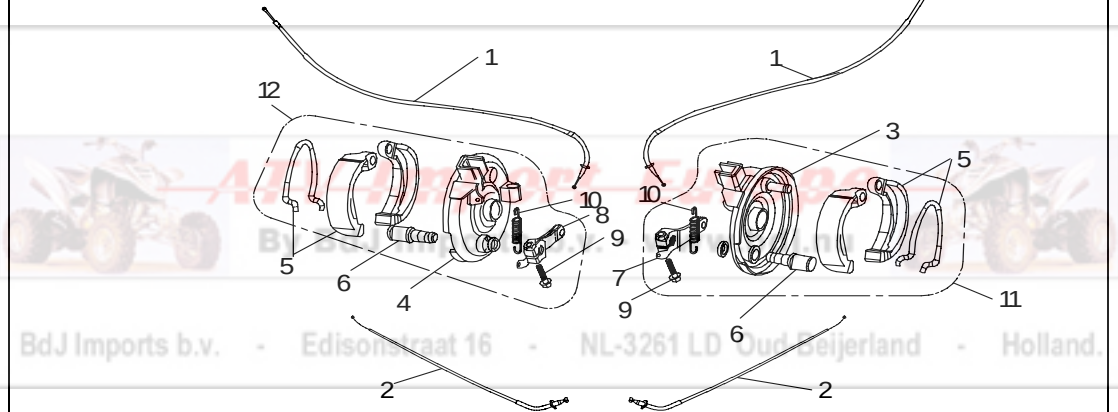 
Item	Part No.	Part Name	Q'ty
1	24110-A01-00A	Tire	2
2	24205-A01-100	Rim	2
3	24106-A01-000	Valve, Tire	2
4	96100-223507A	Seal, Oil	4
5	95100-T6003Z	Bearing, Ball	2
6	93325-A01-000	Spacer, Inner	2
7	31105-A01-000	Drum Brake, Front	2
8	95100-T6002Z	Bearing, Ball	2
9	93320-A01-000	Spacer, Outer	2
10	93100-12540-45G	Washer, Plate	2
11	92140-12-17G	Nut, Insert Lock	2
12	94000-03032	Pin, Cotter	2
13	93615-A01-000	Cap, Rubber	2
14	92130-10S-14G	Nut, Insert Lock	8

F-9

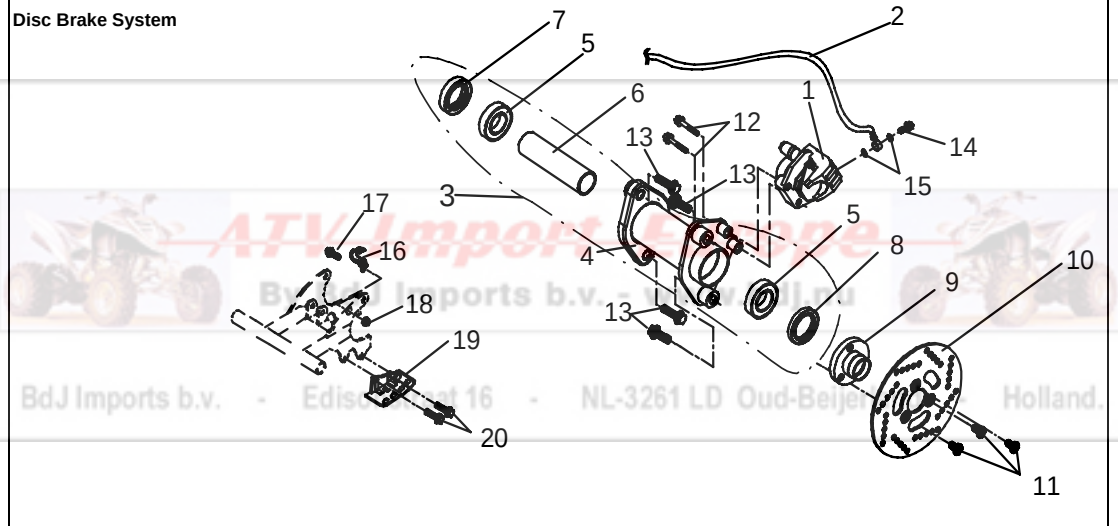 
Rear Tire



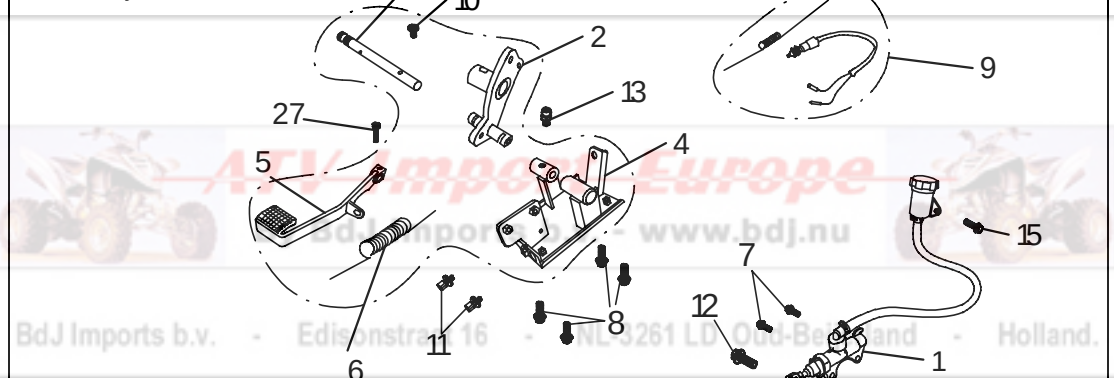 
Item	Part No.	Part Name	Q'ty
1	24110-A01-00B	Tire(HT247)18x9.5-8	2
2	24205-A01-00A	Rim	2
3	23105-A01-000	Shaft Connector, Rear	2
4	24106-A01-000	Valve, Tire	2
5	93615-A01-000	Cap, Rubber	2
6	92140-14-19G	Nut, Insert Lock	2
7	93100-14540-45G	Washer, Plate	2
8	94000-03032	Pin, Cotter	2
9	92130-10S-14G	Nut, Insert Lock	8

F-10**Drum Brake, Front**

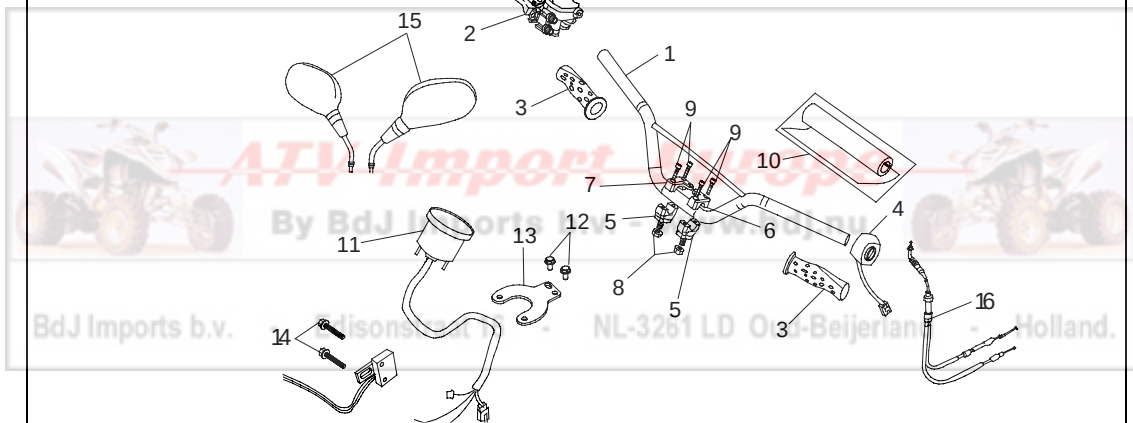 
Item	Part No.	Part Name	Q'ty
1	31205-A02-001	Cable, Front Brake	2
2	31205-A02-010	Cable, Front Brake	2
3	31306-A01-00A	Panel Comp., Front L. Brake	1
4	31311-A01-00A	Panel Comp., Front R. Brake	1
5	31315-A01-000	Shoe, Front Drum Brake	2
6	31320-A01-000	Cam Shaft, Front Brake	2
7	31325-A01-000	Arm, Front L. Brake	1
8	31330-A01-000	Arm, Front R. Brake	1
9	91700-05024-08C	Bolt, Hex. Washer Plate	2
10	97205-A01-000	Return Spring, Front Brake	2
11	31305-A01-010	Panel Comp Ass'y, Front L. Brake	1
12	31310-A01-010	Panel Comp Ass'y, Front R. Brake	1

F-11-1**Disc Brake System**

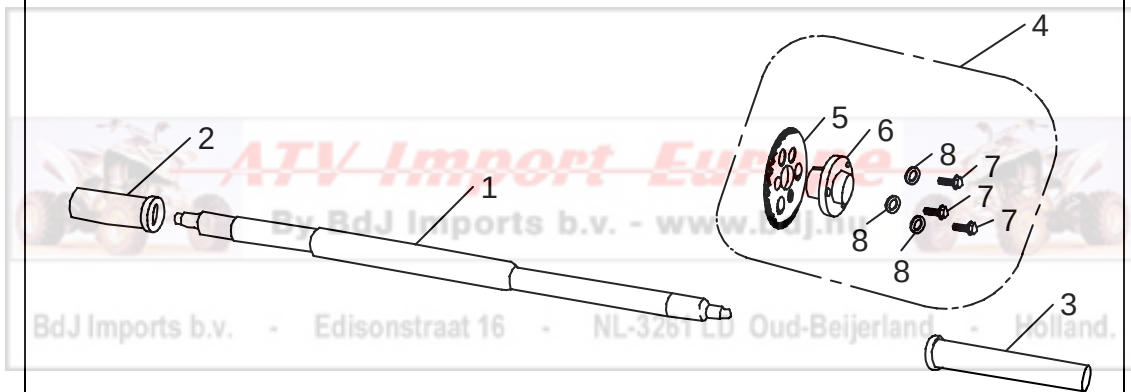 
Item	Part No.	Part Name	Q'ty
1	31115-A01-000	Rear Disc Caliper	1
2	31225-A01-010	Hose,Rear Disc	1
3	31300-A01-010	Rear Axle Bearing Carrier	1
4	31335-A01-010	Rear Axle Bearing Carrier(Disc	1
5	95100-6006ZZ	Bearing	2
6	93330-A01-00A	Spacer	1
7	96100-355511	Oil Seal	1
8	96100-355507	Oil Seal	1
9	31355-A01-010	Holder, Disk	1
10	31120-A01-000	Rear Brake Disc	1
11	91760-10014-08G	Hex Socket Bolt	3
12	91710-08038-12G	Hex Washer Face Bolt	2
13	91710-12028-17G	Hex Washer Face Bolt	4
14	91830-A01-000	Nut, Brake Hose	2
15	93101-A01-000	Washer, Copper	4
16	83115-A01-000	Clip, Brake Hose	1
17	91700-06016-10G	Hex Washer Face Bolt	1
18	92130-06S-10G	Nut, Self-Locking	1
19	71220-A01-000	Rear Brake Guard	1
20	91700-08012-12G	Bolt, Flange	2

F-11-2
Disc Brake System


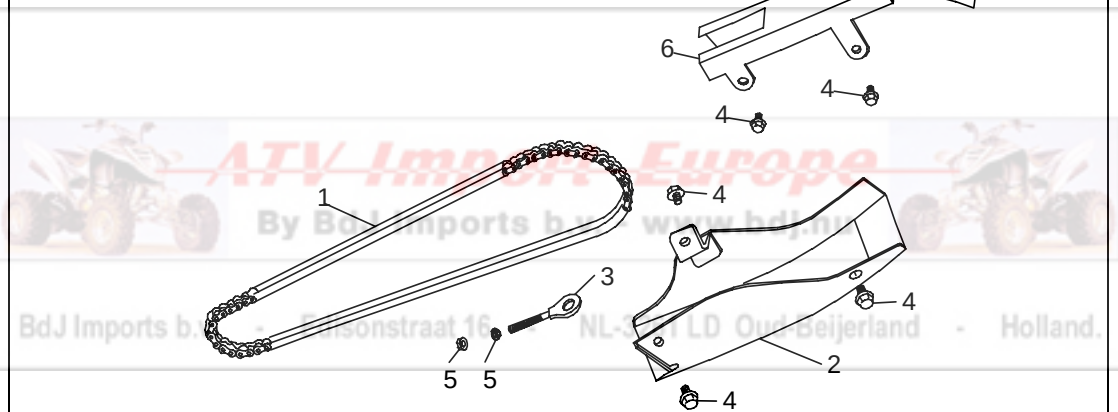 
Item	Part No.	Part Name	Q'ty
1	31406-A02-000	Hydraulic Pump, Footbrake	1
2	31408-A02-A00	Swing Arm, Footbrake	1
3	31408-A02-B00	Axle, Footbrake	1
4	31408-A02-C00	Base, Footbrake	1
5	31408-A02-D00	Pedal, Footbrake	1
6	97211-A02-000	Spring	1
7	91700-08028-12G	Hex Washer Face Bolt	3
8	91823-A02-000	Hex Washer Ladder Bolt	4
9	61205-A01-000	Switch, Footbrake	1
10	91823-A02-010	Hex Washer Ladder Bolt	1
11	92230-A01-000	Bolt, Adjusting	2
12	91823-A02-020	Hex Washer Ladder Bolt	1
13	91805-A01-000	Grease Valve	1
14	92130-06S-10G	Nut, Self-Locking	2
15	91700-06016-10G	Hex Washer Face Bolt	1
16	91760-06025-05G	Screw, Hex. Socket	1

F-12
Handle bar,Lever


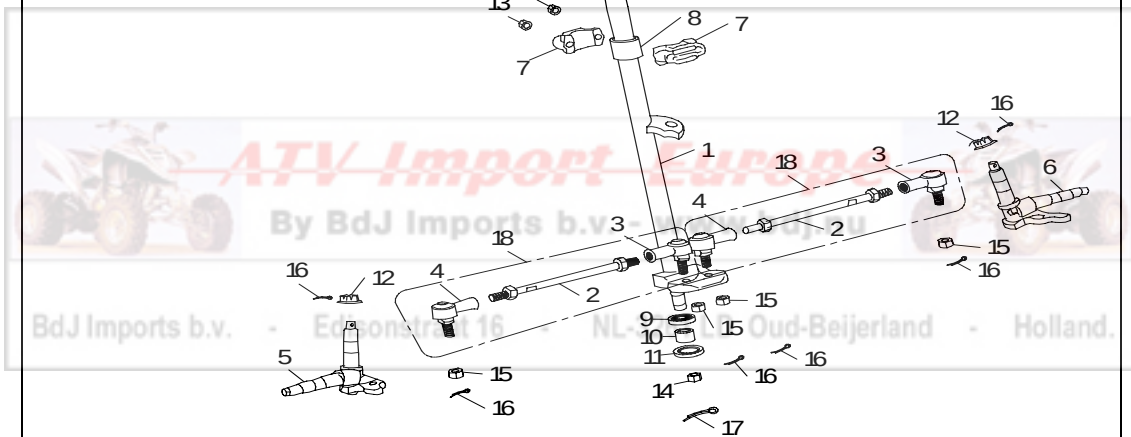 
Item	Part No.	Part Name	Q'ty
1	51101-A01-010	Handlebar	1
2	31450-A01-000	Lever Ass'y, Right	1
3	51105-A01-000	Grip, Handle(L)	2
4	61101-A01-0A0	Handle Switch Ass'y, L.	1
5	52105-A01-000	Bottom Clamp, Handlebar	2
6	52110-A01-000	Bottom Clamp, L. Handlebar	1
7	52115-A01-000	Bottom Clamp, R. Handlebar	1
8	92130-10S-14G	Nut, Insert Lock	2
9	91760-06025-05G	Screw, Hex. Socket	4
10	51110-A01-010	Pad, Handlebar(BD)	1
11	63300-A01-010	Speedometer	1
12	91760-06012-05G	Screw, Hex.Socker	2
13	83120-A01-010	Bracket, Speedometer	1
14	91740-04008G	Bolt,Pan Phillips	2
15	51115-A01-00A	Rear Mirror	1
16	31215-A02-000	Cable, Throttle	1

F-13
Rear Axle,Sprocket


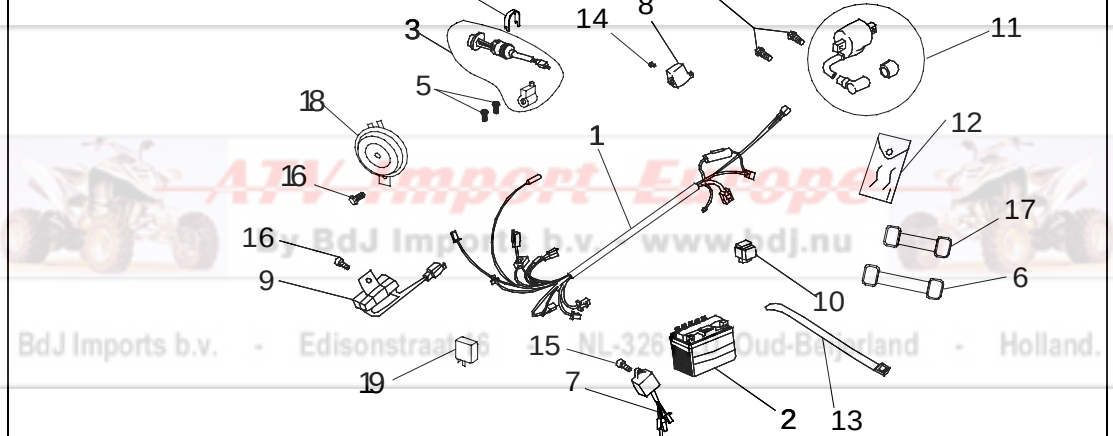 
Item	Part No.	Part Name	Q'ty
1	23205-A01-010	Rear Axle	1
2	93349-A02-001	Spacer Tube, Left	1
3	93335-A02-001	Spacer Tube, Right	1
4	23300-A01-00B	Sprocket Ass'y(rear,428-28T)	1
5	23305-A01-00B	Sprocker	1
6	23310-A01-000	Sprocket Holder, Driven	1
7	91810-A01-000	Bolt, Hex. Washer Plate	3
8	93103-A01-000	Spring Washer	3

F-14
Chain,Guard


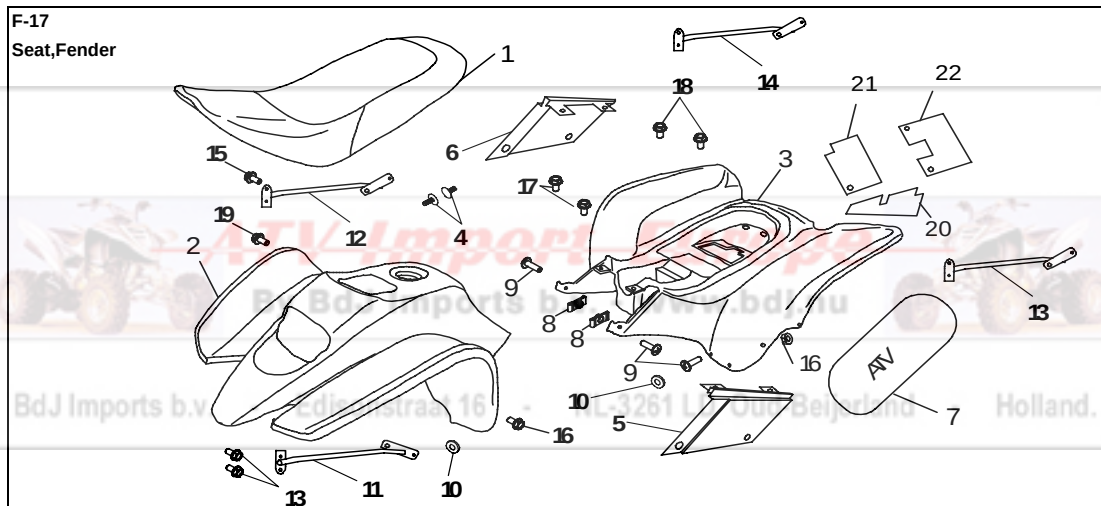 
Item	Part No.	Part Name	Q'ty
1	23315-A01-110	Chain (428H-82link)	1
2	71225-A01-000	Guard ,Chain(bottom)	1
3	91815-A01-000	Adjuster, Chain	2
4	91700-08012-12G	Bolt, Flange	4
5	92120-06-10G	Nut,Flange	4
6	71230-A01-000	Guard, Chain(upper)	1
7	23320-A01-000	Chain Tensioner	1
8	91823-A01-000	Hex Washer Ladder Bolt	1

F-15
Steering,Shaft ,Link


Item	Part No.	Part Name	Q'ty
1	52205-A02-000	Steering Shaft Assembly	1
2	52305-A01-000	Bolt, Stud	2
3	52310-A01-000	Ball Joint, Left Thread	1
4	52315-A01-000	Ball Joint, Right Thread	1
5	52320-A01-000	Knuckle, L.	1
6	52325-A01-000	Knuckle, R.	1
7	52120-A01-000	Shaft Holder, Steering	2
8	93510-A01-000	Bush, PU	1
9	96100-183207A	Seal, Oil	1
10	93325-A01-000	Spacer, Inner	1
11	96100-223507A	Seal, Oil	1
12	92141-10-14G	Cross Thread Nut	2
13	92130-08S-14G	Nut, Insert Lock	2
14	92130-14S-19G	Nut, Insert Lock	1
15	92130-10S-14G	Nut, Insert Lock	4
16	94000-02019	Pin, Cotter	6
17	94000-03032	Pin, Cotter	1
18	52300-A02-000	Link Ass'y	2

F-16
Electronics


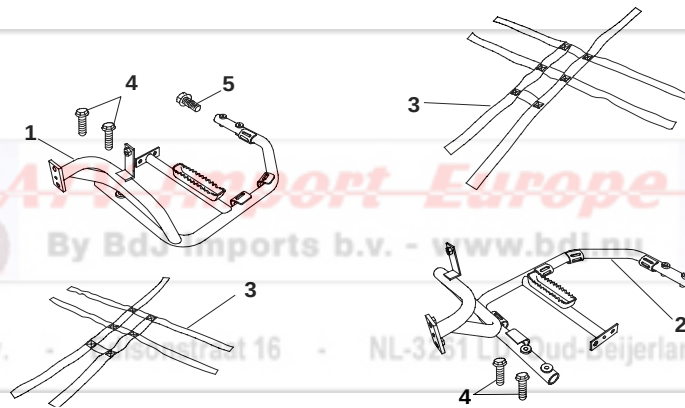 
Item	Part No.	Part Name	Q'ty
1	63100-A01-040	Main Wire Ass'y	1
2	63205-A01-00A	Battery	1
3	61106-A01-000	Main Switch(with Handle Lock)	1
4	61107-A01-000	Clip, Main Switch	1
5	91732-06015G	Flat Bolt, Pan Phillips	2
6	83110-A01-000	Rubber Band, Tool Bag	1
7	61115-A01-000	C.D.I Unit	1
8	61120-A01-000	Rectifier & Regulator	1
9	61125-A01-100	Resistor	1
10	61130-A01-100	Starter Relay	1
11	61109-A01-001	Ignition Coil	1
12	72105-A01-000	Tool Bag	1
13	93705-A01-000	Strap	12
14	91740-05012G	Bolt, Pan Phillips	2
15	91700-06016-10G	Hex Washer Face Bolt	3
16	91700-06012-10G	Bolt, Flange	2
17	83105-A01-010	Rubber Band, Battery	1
18	61145-A01-000	Horn	1
19	61150-A01-000	Blink Relay	1

F-17
Seat, Fender


Item	Part No.	Part Name	Q'ty
1	71305-A02-000	Seat	1
2	72205-A01-000	Fender, Front(blue)	1
3	72210-A01-000	Fender, Rear (blue)	1
4	93611-A01-010	Stopper, Fender	0
5	72230-A02-000	Side Panel, Left	1
6	72225-A02-000	Side Panel, Right	1
7	72115-A02-000	Decals	1
8	92210-A01-000	U Plate Nut(Andoised)	4
9	91731-06016	Bolt, Flange	8
10	93215-A01-000	Rubber Mate	4
11	71100-A02-000	Support, Front Fender L	1
12	71101-A02-000	Support, Front Fender R	1
13	71102-A02-000	Support, Rear Fender L	1
14	71103-A02-000	Support, Rear Fender R	1
15	91700-06016-10G	Hex Washer Face Bolt	4
16	92130-06S-10G	Nut, Self-Locking	4
17	91820-A01-000	Bolt, Hex Ladder(Long)	2
18	91821-A01-000	Bolt, Hex Ladder(Short)	4
19	91750-06016-10G	Bolt ,Flange	2
20	72120-A01-000	Heat Cushion(Side)	1
21	72125-A01-000	Heat Cushion(Front)	1
22	72130-A01-000	Heat Cushion(Rear)	1

F-18

Nerv Bar



Item	Part No.	Part Name	Q'ty
1	72305-A02-010	Nerfbar, Right (chromed)	1
2	72310-A02-010	Nerfbar, Left (chromed)	1
3	72311-A02-000	Nylon Strip	2
4	91700-08012-12G	Bolt, Flange	4
5	91700-08020-12G	Bolt, Flange	2