 


ATV300EC PARTS CATALOGUE LONCIN 300CC EEC ATV


Ref.No	Part No	Part Name And Standard	Quantity
--------	---------	------------------------	----------

FIG.1 (CYLINDER HEAD)

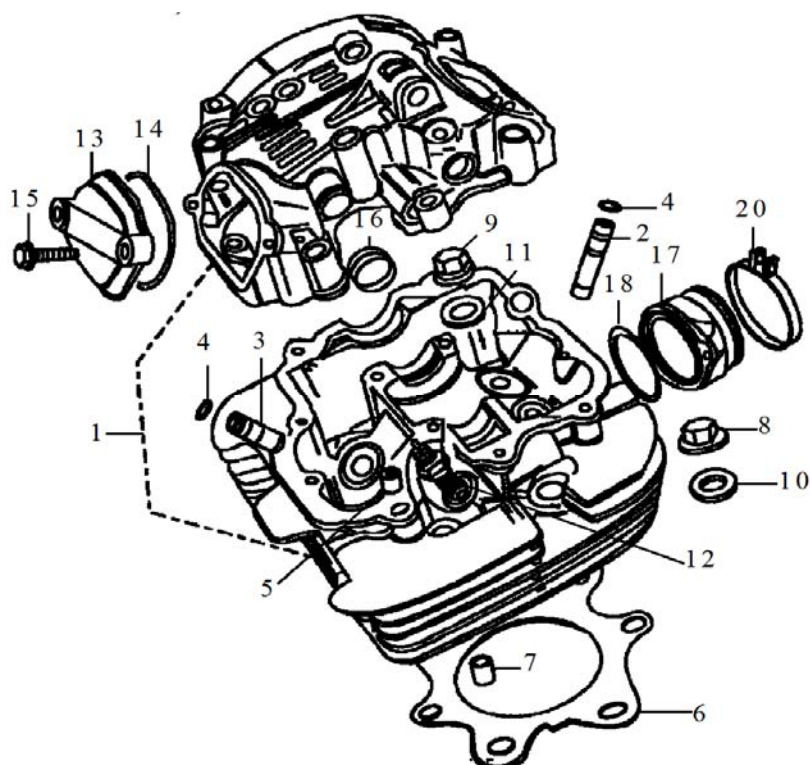


1-1	LX11111-38204	Head assy,cylinder	1
1-2	102214-M200-00	GUIDE IN VALVE	1
1-3	102215-M200-00	GUIDE EX VALVE	1
1-4	102217-M200-00	RING VALVE GUIDE	2
1-5	LX09206-08001	Pin	2
1-6	LX11141-38201	Gasket cylinder head	1
1-7	LX04211-13189	Pin	2
1-8	LX09519-10026	Nut	2
1-9	LX09159-10069	Nut	2
1-10	LX09160-10039	Washer	2
1-11	LX09168-10017	Washer	2
1-12	LX09428-00399	Spark piug	1
1-13	LX11175-38202	Inspectin valve cover	2
1-14	LX09280-55003	Oring	2
1-15	LX01550-06257	Bolt	4
1-16	102278-M200-00	PLUG CAMSHAFT	1
1-17	LX13110-38200	Pipe,intake	1
1-18	LX09280-40003	Oring	1
1-19	LX02112-36163	Bolt	2
1-20	113612-M200-00	Clamp	1

 FIG.2 (CYLINDER)

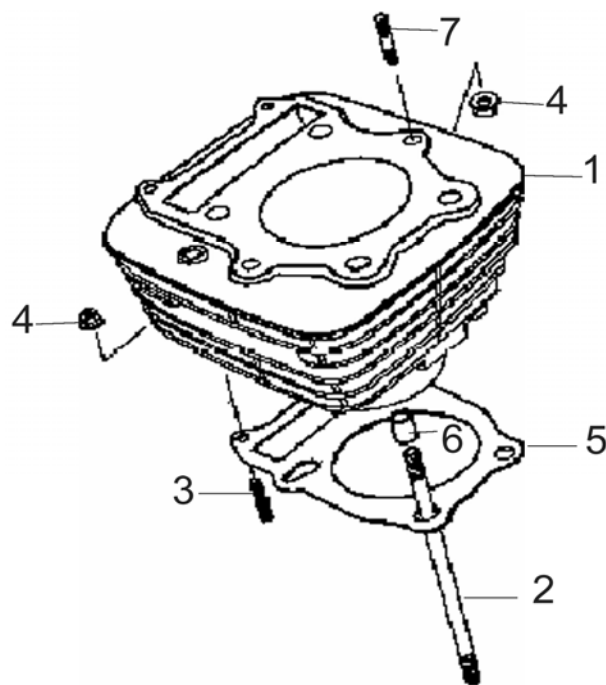


2-1	LX11210-38204	Cylinder	1
2-2	LX09108-10030	Stud bolit	4
2-3	LX09108-06002	Stud bole M6×25	2
2-4	LX08316-10067	Nut M6	4
2-5	LX11241-38301	Gasket,cylinder	1
2-6	LX04211-13189	Pin $\Phi 13 \times 18$	2
2-7	LX01421-06308	Stud bolit M6×30	2

 FIG.3 (CRANKCASE ASSY)

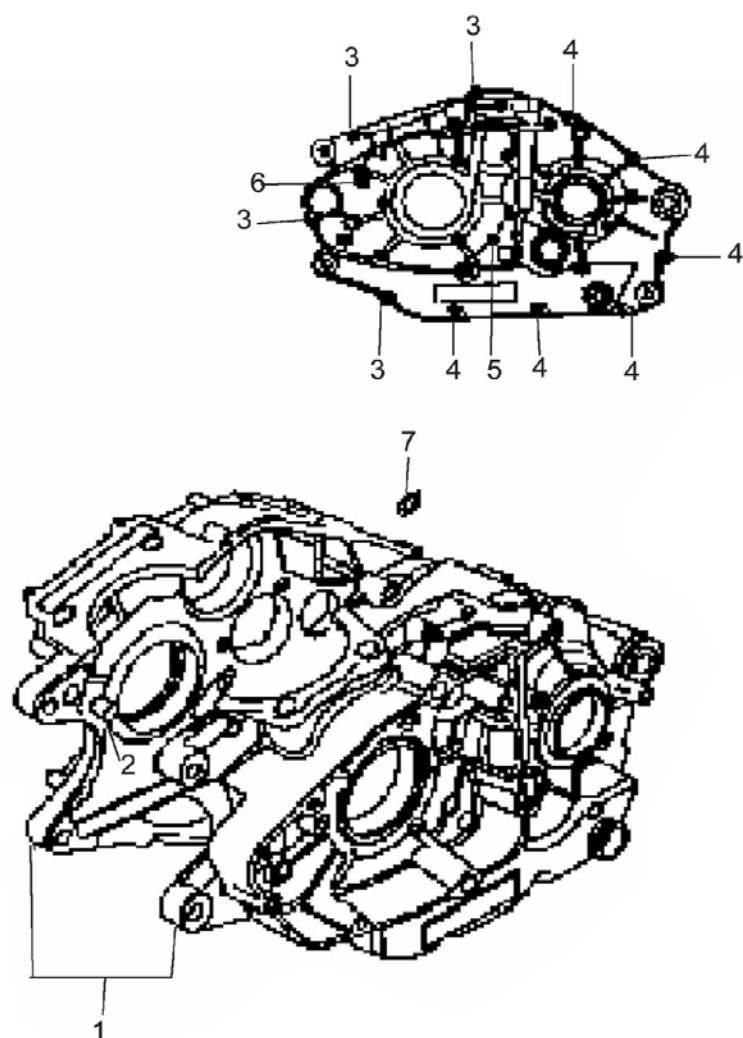

3-1	LX11300-38302	Crankcassy	1
3-2	LX04211-13189	Pin $\Phi 13 \times 18$	2
3-3	LX01547-06357	Bolt M6×35	4
3-4	LX01547-06457	Bolt M6×45	6
3-5	LX01547-06553	Bolt M6×55	1
3-6	LX01547-06603	Bolt M6×60	1
3-7	LX09280-10015	O-ring	1

 
FIG.4(CRANKCASE COMP)

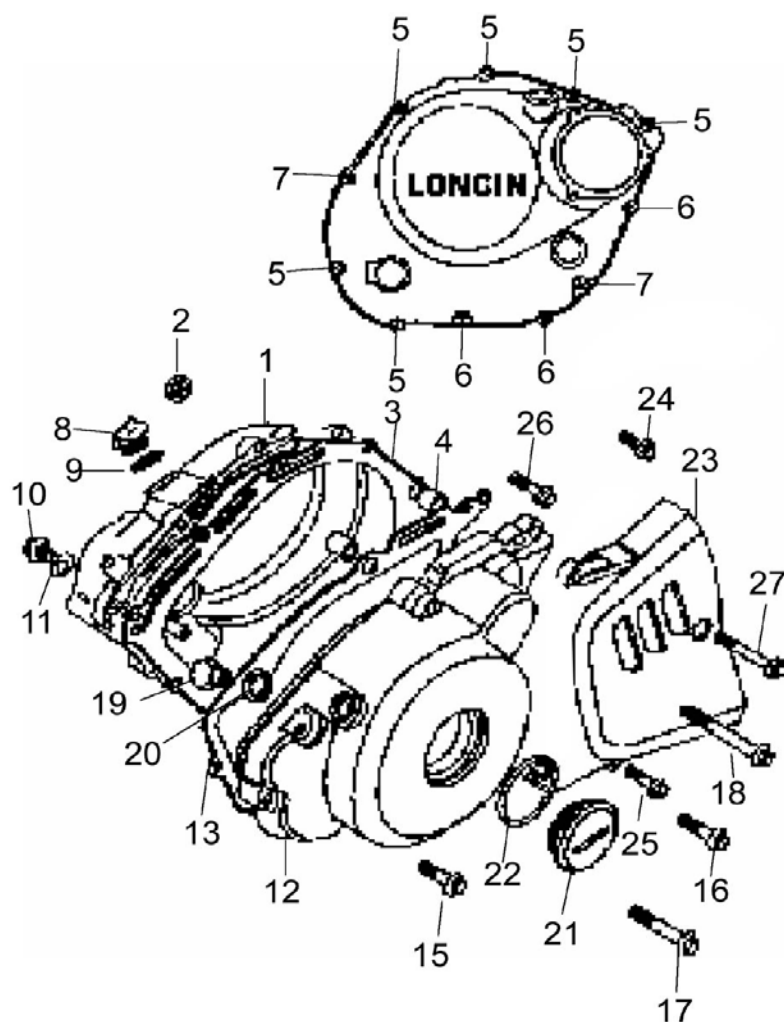

4-1	LX11341-38302	Cover clutch	1
4-2	LX11971-42010	Lens oil level	1
4-3	LX11482-38311	Gasket clutch cover	1
4-4	LX04211-13189	Pin $\Phi 13 \times 18$	4
4-5	LX01547-06257	Blot M6 $\times$ 25	6
4-6	LX01547-06357	Blot M6 $\times$ 35	3
4-7	LX01547-06457	Blot M6 $\times$ 45	2
4-8	LX09259-20007	Plug , oil filler	1
4-9	LX09280-17003	O-ring	1
4-10	LX09247-14012	Plug , oil check	1
4-10	110600111-0001		1
4-11	LX09168-14002	Gasket	1
4-12	LX011351-38300	Cover , magneto	1
4-13	LX011483-37D00	Gasket	1
4-15	LX01547-06257	Blot M6 $\times$ 25	3
4-16	LX01547-06357	Blot M6 $\times$ 35	1
4-17	LX01547-06507	Blot M6 $\times$ 50	1
4-18	LX01547-06607	Blot M6 $\times$ 60	1
4-19	LX09247-12104	Plug,dead center upper	1
4-20	LX09168-12002	Gasket	1
4-21	LX09259-36011	Cap	1
4-22	LX09280-33004	O-ring	1
4-23	LX11361-38300	Chain cover	1


4-24	LX01547-05207	Bolt I	1
4-25	LX01547-05257	Bolt V	1
4-26	LX01547-05307	Bolt II	1
4-27	LX01547-05457	Bolt III	1
4-28	270800001-0001		1

 FIG.5 (CRAANKSHAFT AND CONNCTING ROD COMP)

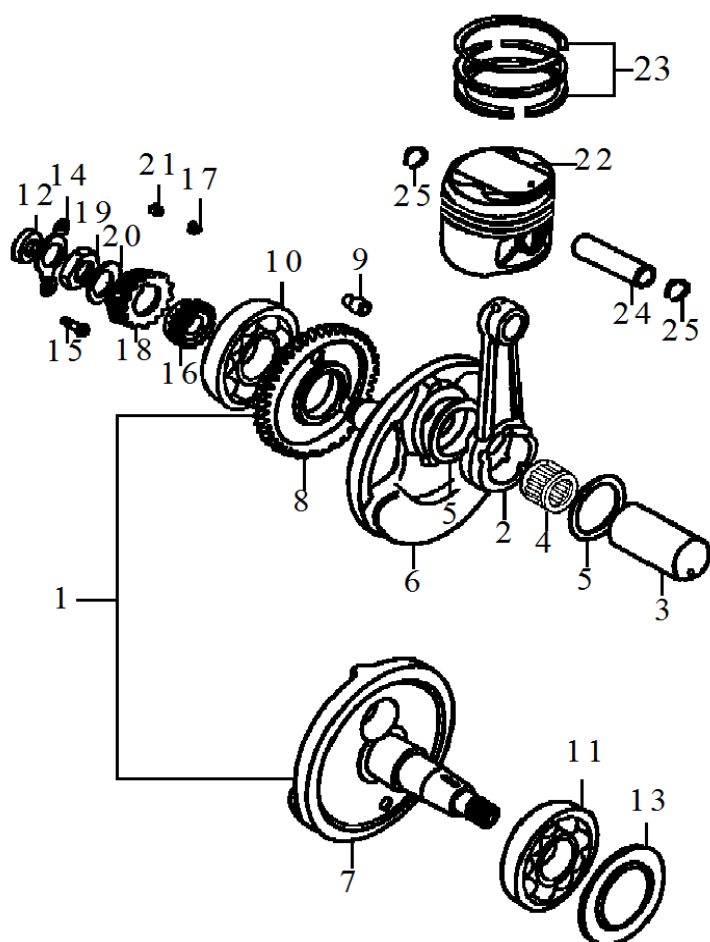


5-1	LX12901-38311	Crankshaft assy	1
5-2	103201-M200-00	ROD CONNECTING	1
5-3	103251-M200-00	PIN,CRANKSHAFT	1
5-4	103261-M200-00	BEARING,CONNECTING ROD	1
5-5	103209-M200-00	WASHER	2
5-6	103221-M200-00	CRANKSHAFT RH	1
5-7	103211-M200-00	CRANKSHAFT LH	1
5-8	LX12661-38202	Drive,gear balancer	1
5-9	LX09209-12006	Pin	1
5-10	LX09262-30070	Bearing RH(30×72×19)	1
5-11	LX09262-35028	Bearing LH(35×80×21)	1
5-12	LX09282-14001	Oil seal RH(14×26×6)	1
5-13	LX12521-38300	Washer	1
5-14	LX12548-38200	Plate,RH	1
5-15	LX02122-05103	Screw	1
5-16	LX12731-38200	Sprocket drive	1
5-17	LX12749-32400	Key,sprocket	1
5-18	LX21111-38200	Primary drive gear	1
5-19	LX09140-20008	Nut	1
5-20	LX09164-20003	Washer	1
5-21	LX09421-07002	Key,gear	1
5-22	LX12111-38201	Piston	1
5-23	LX12141-49221	Ring set,piston assy	1
5-24	LX12151-15501	Pin	1
5-25	LX09381-18002	Circlip	2

 FIG.6 (STARTER CLUTCH)

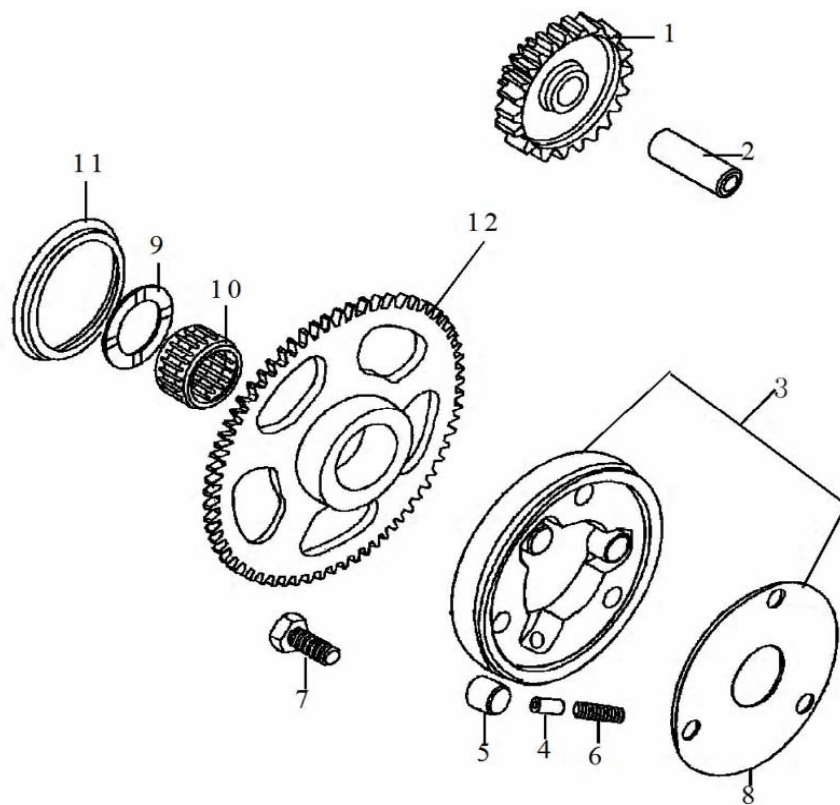


6-1	LX12611-38300	Gear,starter idle(NT:51×19)	1
6-2	LX09206-13007	Pin(13×40)	1
6-3	LX12600-38303	Clutch set starter	1
6-4	109199-M200-00	SLEEVE,SPRING	3
6-5	109197-M200-00	ROLLER	3
6-6	109198-M200-00	SPRING	3
6-7	LX09100-08299	Bolt M8×20	3
6-8	109114-M200-00	SHIM	1
6-9	LX09160-27005	Washer	1
6-10	LX09263-27004	Bearing(27×32×21.8)	1
6-11	LX09289-52002	Oil seal	1
6-12	LX12620-38301	Gear,clutch(NT:67)	1

 FIG.7 (CRANK BALANCER)

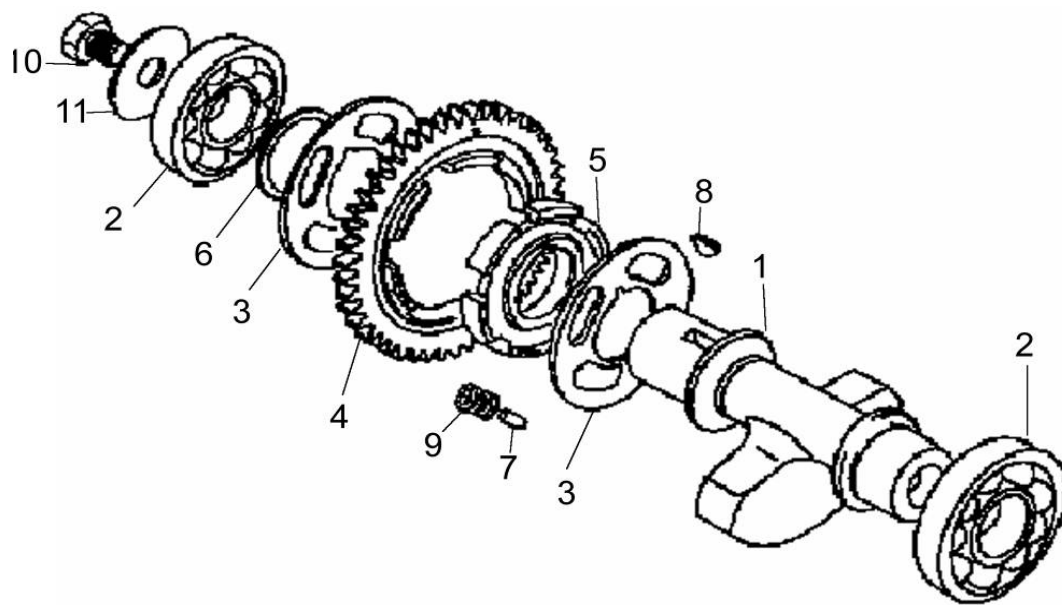


7-1	LX12651-38202	Shaft crank balancer	1
7-2	LX09262-25047	Bearing(25×62×17)	2
7-3	LX12663-38200	Washer Driven gear	2
7-4	LX12666-38200	Gear driven(NT:46)	1
7-5	LX12669-38200	Inner race driven gear	1
7-6	LX09181-25186	Washer	1
7-7	LX09202-04017	Pin	3
7-8	LX08341-31049	Wood wuff key	1
7-9	LX09440-09015	Spring	6
7-10	LX01500-12163	Bolt M12×16	1
7-11	LX09160-12034	Washer 12×40×2.5	1

 FIG.8 (CAM SHAFT VALVE)

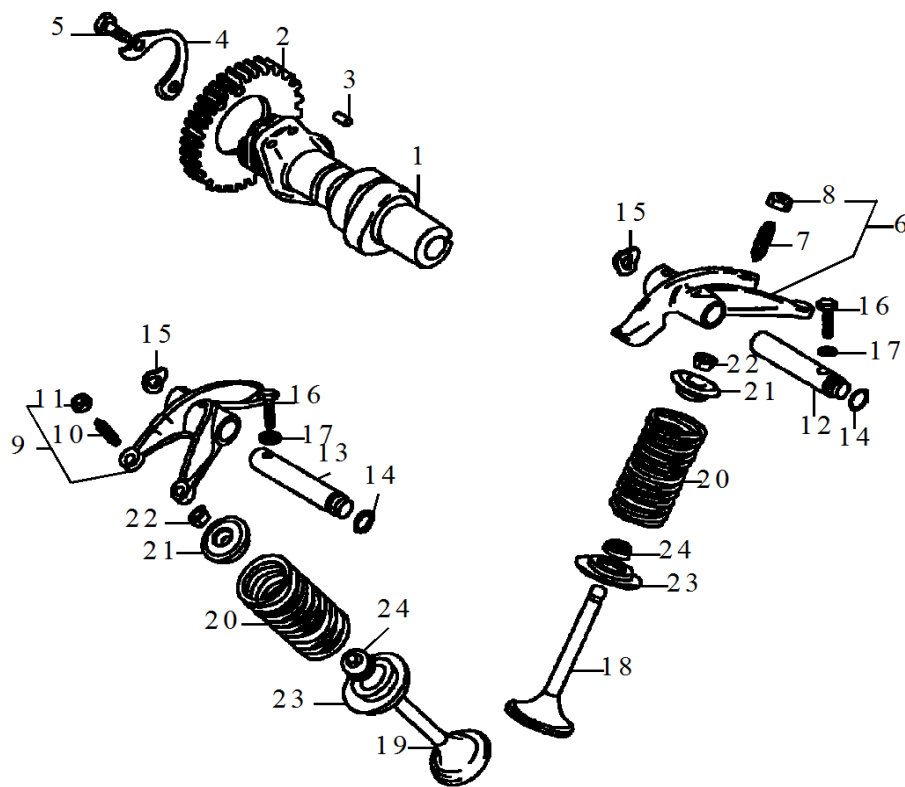


8-1	LX12711-38202	Cam shaft	1
8-2	LX12741-37400	Sprocket	1
8-3	LX04221-05109	Pin	1
8-4	LX12747-44000	Washer	1
8-5	LX09111-06027	Bolt	2
8-6	LX12840-38201	Arm valve rocker intake	1
8-7	104413-M200-00	BOLT,TAPPER ADJUSTING	2
8-8	104414-M200-00	NUT,TAPPER ADJUSTING	2
8-9	LX12850-38201	Arm valve rocker exhaust	1
8-10	104413-M200-00	BOLT,TAPPER ADJUSTING	2
8-11	104414-M200-00	NUT,TAPPER ADJUSTING	2
8-12	LX12861-38200	Shaft,rocker arm In	1
8-13	LX12871-38200	Shaft,rocker arm ex	1
8-14	LX09280-09005	O-ring 8.6×1.9	2
8-15	LX09164-12018	Washer	2
8-16	SA0630-HZ	BOLT,FLANGE,M6*30	2
8-17	104425-M200-00	GASKET	2
8-18	LX12911-38200	Valve intake	2
8-19	LX12912-38201	Valve exhaust	2
8-20	LX12921-38211	Spring valve	4
8-21	LX12931-49200	Seat spring	4
8-22	LX12932-49200	Cotter,valve	8
8-23	LX12933-38200	Seat spring	4
8-24	LX09289-05006	Oil seal 5.5×11×8.2	4

 FIG.9 (CAM CHAIN)

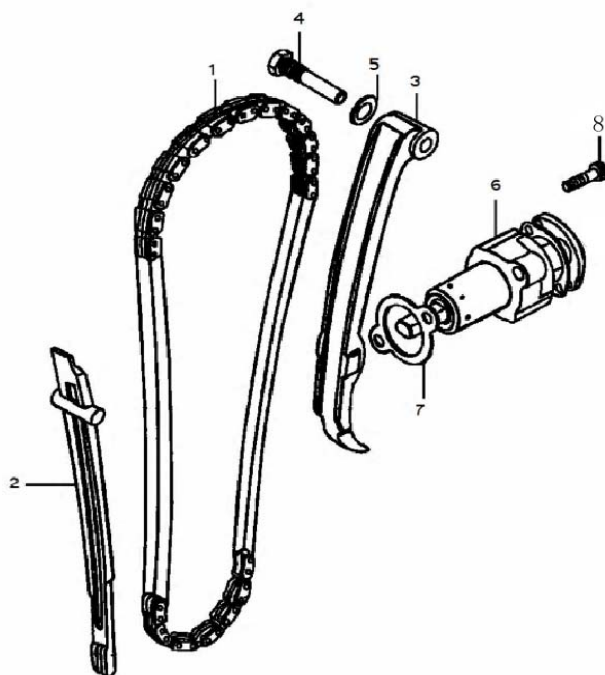


9-1	LX12760-13F00	Chain camshft drive	1
9-2	LX12771-38200	Guide cam chain	1
9-3	LX12811-38200	Tensioner,cam chain	1
9-4	LX12812-32400	Bolt	1
9-5	LX09168-08008	Washer(8.2×14×1)	1
9-6	LX12830-38201	Adjuster assy tensioner	1
9-7	LX12837-24A10	Gasket	1
9-8	LX07130-06257	Bolt M6×25	2

 FIG.10 (OIL PUMP)

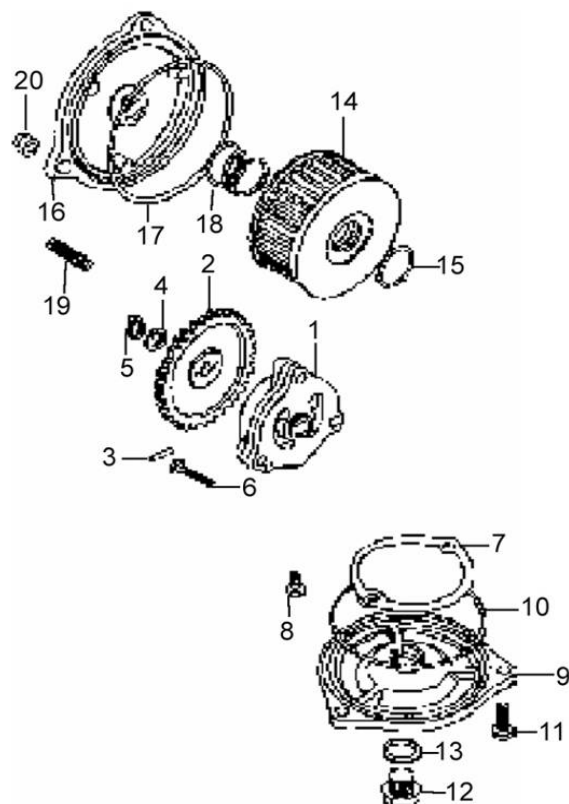

10-1	LX16400-38200	Oil pump assy	1
10-2	LX16331-38200	Gear driven(NT:33)	1
10-3	LX09261-04009	Pin	1
10-4	LX09181-10158	Washer (10×18×0.5)	1
10-5	LX08331-31109	Circlip	1
10-6	LX02112-06235	Screw	3
10-7	LX16520-37400	Strainer,engine oil	1
10-8	LX02112-75123	Screw	2
10-9	LX16523-38200	Cap,stariner	1
10-10	LX09280-82001	O-ring(82×2.4)	1
10-11	LX01547-06203	Bolt M6×20	3
10-12	LX09247-14011	Oil boli M14×12	1
10-13	LX09168-14002	Gasket	1
10-14	LX16510-38240	Filter,engine oil	1
10-15	LX09280-15007	O-ring	1
10-16	LX16512-38220	Cap,oil filter	1
10-17	LX09280-72001	O-ring(73.8×2.4)	1
10-18	LX09440-21006	Spring	1
10-19	LX09108-06128	Stud bolt	3
10-20	LX08313-10067	Nut M6×10×9.5	3

 
FIG.11 (CLUTCH)

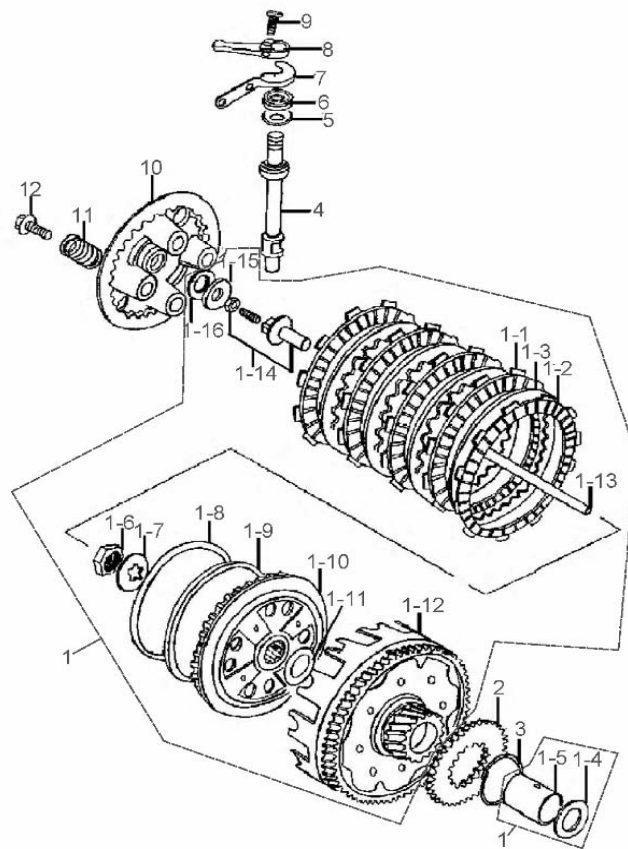

11-1	LX106000-13AB-00	Primary clutch assy	1
11-1-1	LX21441-37400	Plate drive	1
11-1-2	LX21442-37401	Plate drive($\phi 120 \times 3.5$)	4
11-1-3	LX21451-37400	Plate driven	4
11-1-4	LX08211-22363	Washer ($22 \times 36 \times 2$)	1
11-1-5	LX09180-22024	Spacer	1
11-1-6	LX09140-22005	Nut	1
11-1-7	LX09167-22010	Lock washer	1
11-1-8	106288-M200-00	BUTTERFLY SPRING	1
11-1-9	106294-M200-00	WASHER	1
11-1-10	106230-13AB-00	CENTER COMP,CLUTCH	1
11-1-11	LX08211-22363	Washer($\phi 22 \times \phi 36 \times 2$)	1
11-1-12	106211-M200-00	OUTER COMP.,CLUTCH	1
11-1-13	LX23110-38201	Rood,push	1
11-1-14	LX23109-38201	Seat bearing	1
11-1-15	LX09263-15003	Thrust,bering	1
11-1-16	LX09160-15045	Washer	1
11-2	LX16321-38200	Drive,gear oil pump	1
11-3	LX09380-50001	Circlip A	1
11-4	LX23122-38200	Cam shaft	1
11-5	LX09160-14054	Washer	1
11-6	LX09285-12002	Oil seal	1
11-7	LX23117-38200	Circlip,oil seal	1
11-8	LX23271-12D10	Arm rocker	1
11-9	LX01500-06207	Bolt(M6 $\times$ 20)	1
11-10	106235-M200-00	PLATE,CLUTCH PRESSURE	1
11-11	106237-M200-00	SPRING,CLUTCH	4
11-12	S60616-BZ	BOLT(M6 $\times$ 16)	4

11-10	106310-M200-00001		1
11-11	191230018-0001		1

 
FIG.12 (TRANSMISSION)

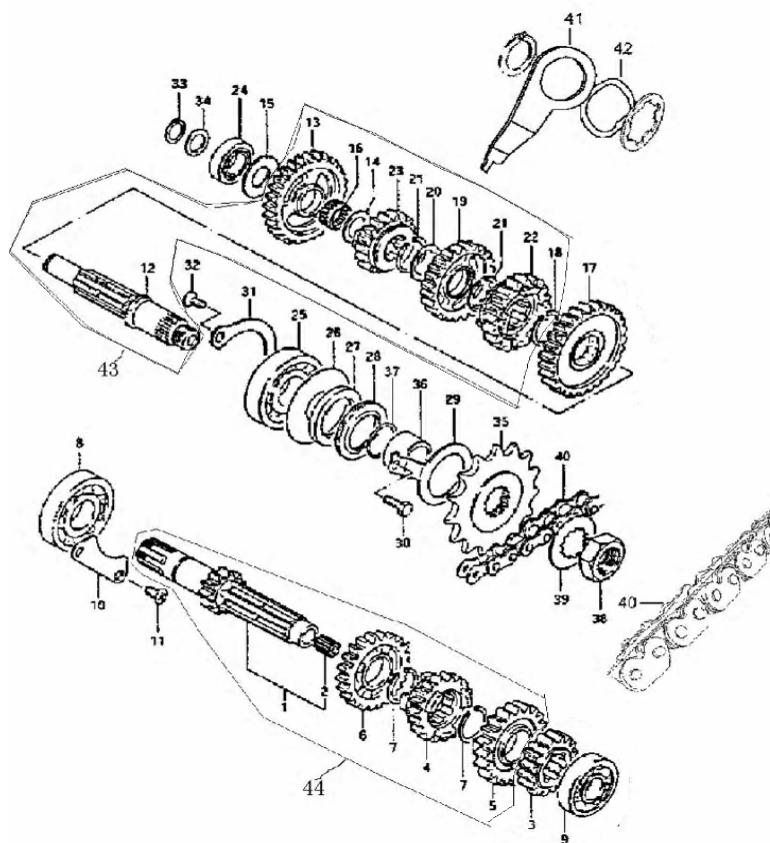

12-1	107101-13AB-00	Mainshaft	1
12-2	107102-M200-00	Bush	1
12-3	LX107301-13AB-00	Reverse gear,drive	1
12-4	107121-13AB-00	Gear,2th drive	1
12-5	107131-13AB-00	Gear,3th drive	1
12-6	107141-13AB-00	Gear,4th drive	1
12-7	107194-M200-00	Circlip	2
12-8	107195-M200-00001		1
12-9	107195-M200-00	BEARING (φ17×40×20)	1
12-10	LX24741-38200	Holder,bearing	1
12-11	LX09125-16110	Screw	2
12-12	107200-13AB-00	Counter shaft	1
12-13	107211-13AB-00	1st driven gear	1
12-14	T22710-172810	Washer	1
12-15	T22710-173620	Washer , thrust	1
12-16	107212-M200-00	BEARING (φ17×21×9.8)	1
12-17	LX107302-13AB-00	Reverse gear,driven	1
12-18	107194-M200-00	4st driven gear Cl	1
12-19	107221-13AB-00	Gear,2th driven	1
12-20		O-ring	1
12-21	107194-M200-00	Collar	1
12-22	107231-13AB-00	Gear,3th driven	1
12-23	107241-13AB-00	Gear,4th driven	1
12-24	LX09264-17001	bearing,RH(φ17×36×12),driveshaft	1
12-25	LX09262-22013	bearing,LH(φ22×56×16),driveshaft	1
12-26	LX09160-35007	Washer	1
12-27	LX09282-30004	Oil seal(1)	1

12-28	LX09282-30041	Oil seal(2)	1
12-29	LX24751-38201	Civclip , Oil seal	1
12-30	LX01500-06123	Bolt M6×12	2
12-31	LX24752-32400	Holder , bearing	1
12-32	LX02122-06123	Screw M6×12	2
12-33	LX08331-31179	Circlip	1
12-34	LX09181-17139	Washer φ17×24×1	4
12-35	LX27511-32401	Sprocket (NT : 15)	1
12-36	LX27531-38300	Spacer	1
12-37	LX09280-21008	O-ring φ21×2.5	1
12-38	LX09140-18008	Nut	1
12-39	LX09167-22012	Washer	1
12-40	LX107317-13AB-00	Chain wheel	1
12-41	LX108115-13AB-00	Plate	1
12-42	LX107295-13AB-00	Spring	1
12-43	107200-13AB-00	Driveshaft	1
12-44	LX107100-13AB-00	Principal axis	1

 
FIG.13 (GEAR SHIFTING)

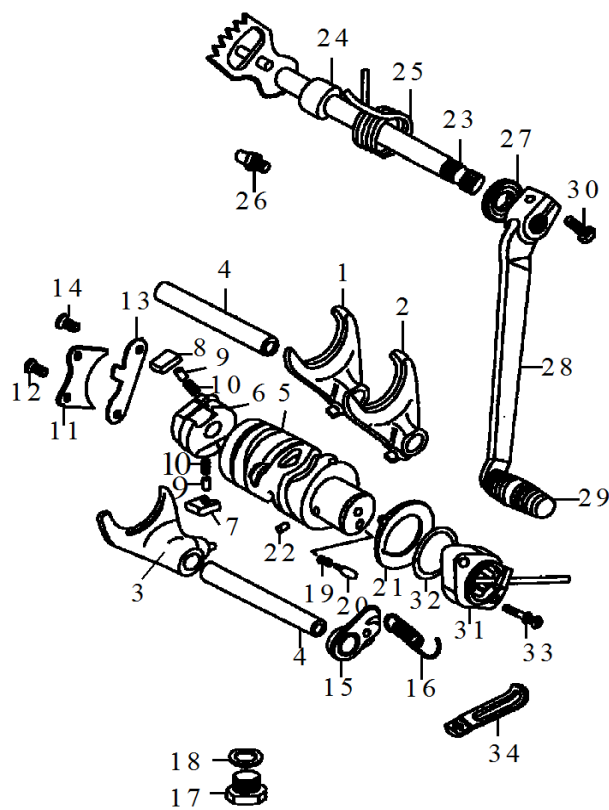

13-1	LX25211-32400	Front,gear shifting 1	1
13-2	LX108132-13AB-00	Front,gear shifting 2	1
13-3	LX108133-13AB-00	Front,gear shifting 3	1
13-4	LX25411-14331	shaft fork	2
13-5	LX25310-38200	Cam,gear shifting	1
13-6	LX108121-13AB-00	Driven,gear,cam	1
13-7	LX25323-34201	Pawl 1	1
13-8	LX25314-34201	Pawl 2	1
13-9	LX09261-05003	Pin	2
13-10	LX09440-04003	Spring	2
13-11	LX25331-38201	Lifter panel	1
13-12	LX02122-06123	Screw	2
13-13	LX25341-38200	Guide,cam	1
13-14	LX02122-06123	Screw	2
13-15	LX25230-34000	Stopper	1
13-16	LX09443-08026	Spring	1
13-17	LX09247-14011	Plug,Pin	1
13-18	LX09168-14002	Washer	1
13-19	LX09440-04010	Spring	1
13-20	LX09209-05011	Contact	1
13-21	LX25381-45400	Plate,stopper	1
13-22	LX04221-04069	Pin	1
13-23	LX25510-38200	Shaft,gear shifting	1
13-24	108222-M200-00	COLLER	1
13-25	108215-M200-00	RETURN SPRING,GEAR SHIFT	1
13-26	LX25671-01011	Screw	1
13-27	LX09285-12002	Oil seal	1
13-28	LX25600-05371	Lever assy,gear shifting	1


13-29	201102-M200-00	RUBBER,GEAR SHIFT PEDAL	1
13-30	LX01500-06203	Bolt	1
13-31	LX37720-33200	Gear switch assy	1
13-32	LX09280-26003	O-ring	1
13-33	LX02112-75203	Screw	1
13-34	LX09209-05011	Contact	1
13-35	LX09440-04010	Spring	1

 FIG.14 (STARTING MOTOR)

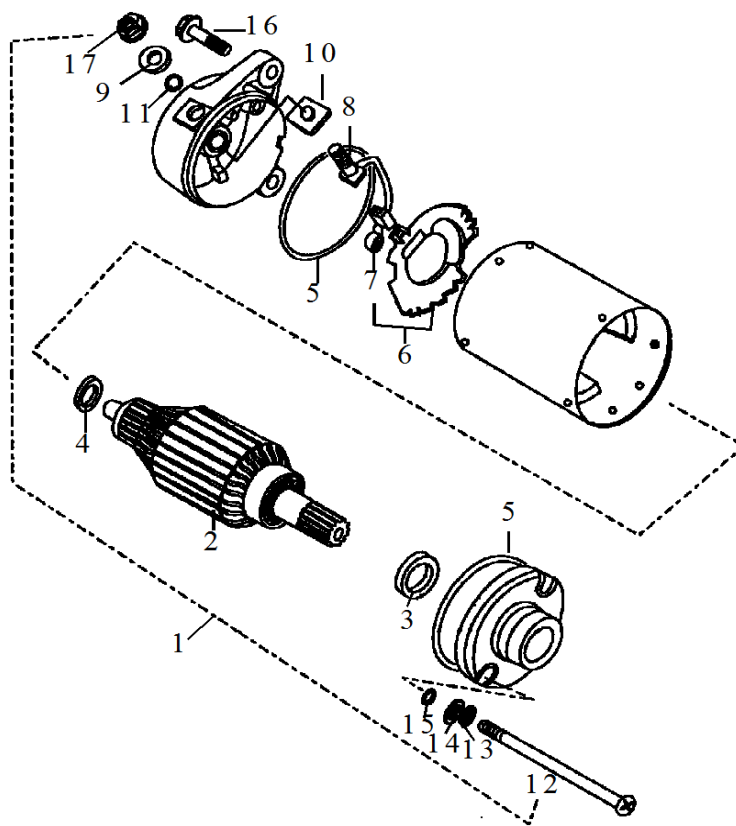


14-1	LX31100-38300	Motor assy,starting	1
14-2		Armature	1
14-3		Oil seal	1
14-4		Shim set starter	1
14-5		O ring	2
14-6		Holder,brush	1
14-7		Motor brush SPR	2
14-8		Brush	1
14-9		Bush,starter MO	1
14-10		Bush	1
14-11		O-ring	1
14-12		Bolt	2
14-13		Washer lock	2
14-14		Washer,starter	2
14-15		O-ring	2
14-16	LX01550-06257	Bolt	2
14-17		Nut	2

 FIG.15 (MAGNETO)

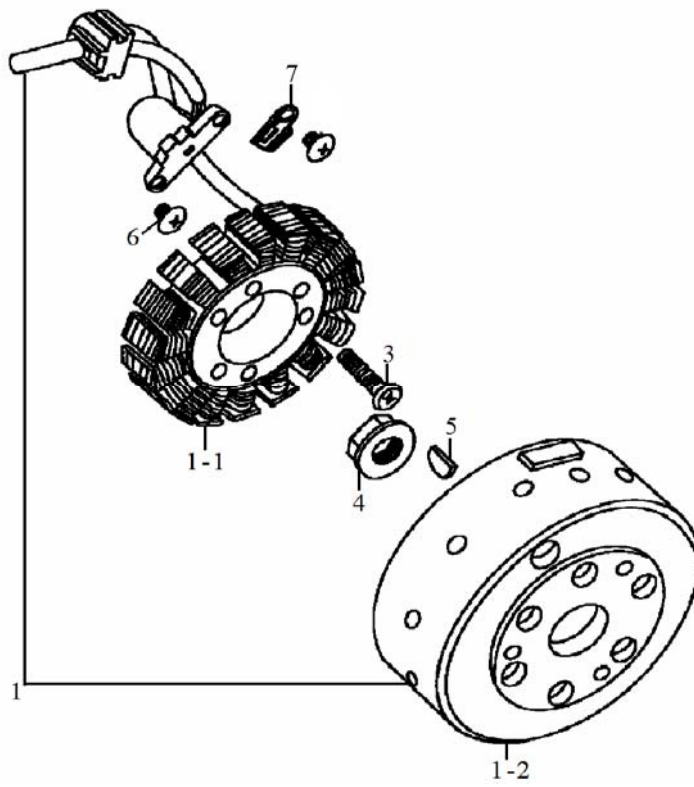

15-1	LX32100-38304	Magneto assy	1
15-1-1	LX32101-38302	Stator assy	1
15-1-2	LX32102-38303	Rotor flywheel assy	1
15-3	LX02112-06253	Screw	3
15-4	LX31792-49200	Nut	1
15-5	LX08341-31039	Wood ruff,key	1
15-6	LX07130-05123	Screw(M5×12)	2
15-7	101315-M200-00	CLAMP LEAD WIRE	1

 
FIG.16 (Carburetor)

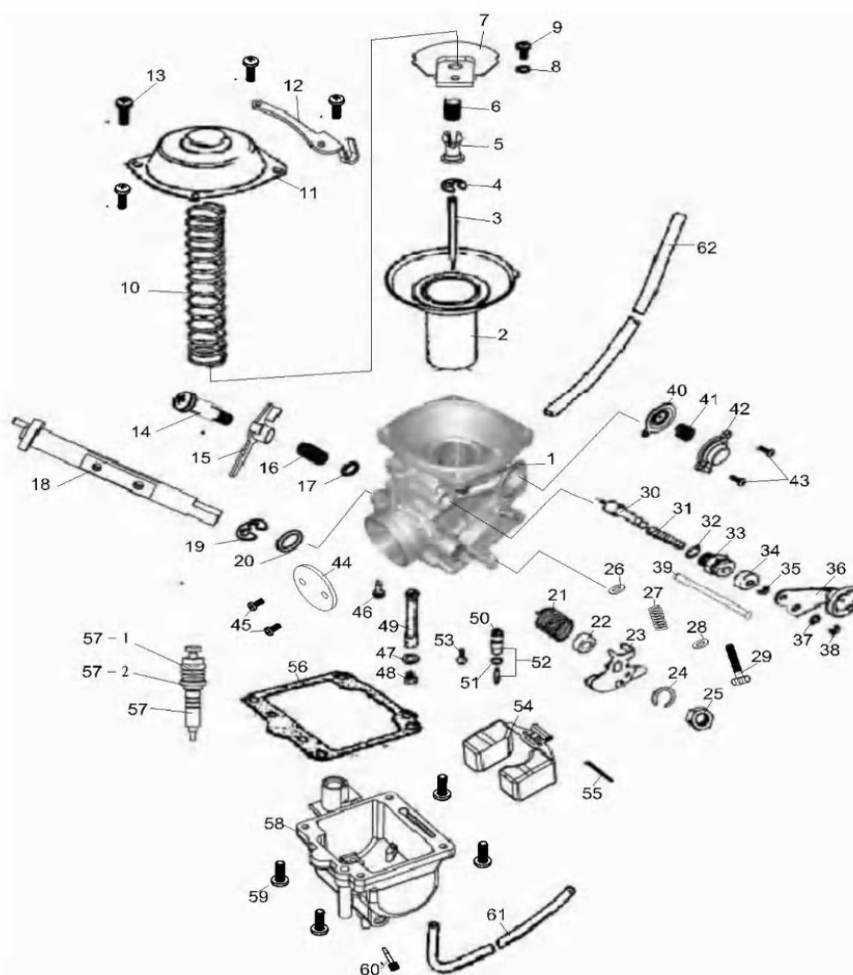

16	113100-0140010	Carburetor	1
16-1		carburetor body assembly	1
16-2		piston valve assembly	1
16-3		jet needle	1
16-4		E Ring	1
16-5		Jet needle set	1
16-6		Spring	1
16-7		Fitting set	1
16-8		Washer	1
16-9		Bolt	1
16-10		Spring	1
16-11		vaccum chamber cover	1
16-12		Pipe set	1
16-13		BoltM5×10	4
16-14		Bolt	1
16-15		accelerating pump pole	1
16-16		Spring	1
16-17		Washer	1
16-18		Discontinue	1
16-19		E Ring	1
16-20		Washer	1
16-21		Spring	1
16-22		Guide sleeve	1
16-23		String set	1


16-24		Spring washer	1
16-25		Nut	1
16-26		O-ring	1
16-27		Spring	1
16-28		O-ring	1
16-29		throttle stop screw	1
16-30		Valve,starter	1
16-31		Spring , starter	1
16-32		O-RING	1
16-33		Holder guide	1
16-34		Pipe,starter	1
16-35		E Ring	1
16-36		Handle	1
16-37		Washer	1
16-38		E Ring	1
16-39		Pole,starter	1
16-40		coasting enricher diaphragm	1
16-41		Spring	1
16-42		coasting enricher cover	1
16-43		bolt,M4×10	2
16-44		Discontinue Valve	1
16-45		bolt,M3×6	2
16-46		Jet,pilot	1
16-47		O-ring	1
16-48		Jet,main	1
16-49		Jet,needle	1
16-50		Filter	1
16-51		O-ring	1
16-52		Valve assy,needle	1
16-53		BoltM4×6	1
16-54		Float	1
16-55		Float pin	1
16-56		gasket,float chamber	1
16-57		Accelerating pump valve assembly	1
16-57 - 1		crapy pipe	1
16-57 - 2		Cover,accelerating pump	1
16-58		float chamber	1
16-59		bolt,M5×14	4
16-60		drain screw	1
16-61		tube set	1
16-62		air tube	1

 FIG.17 (Air Filter)

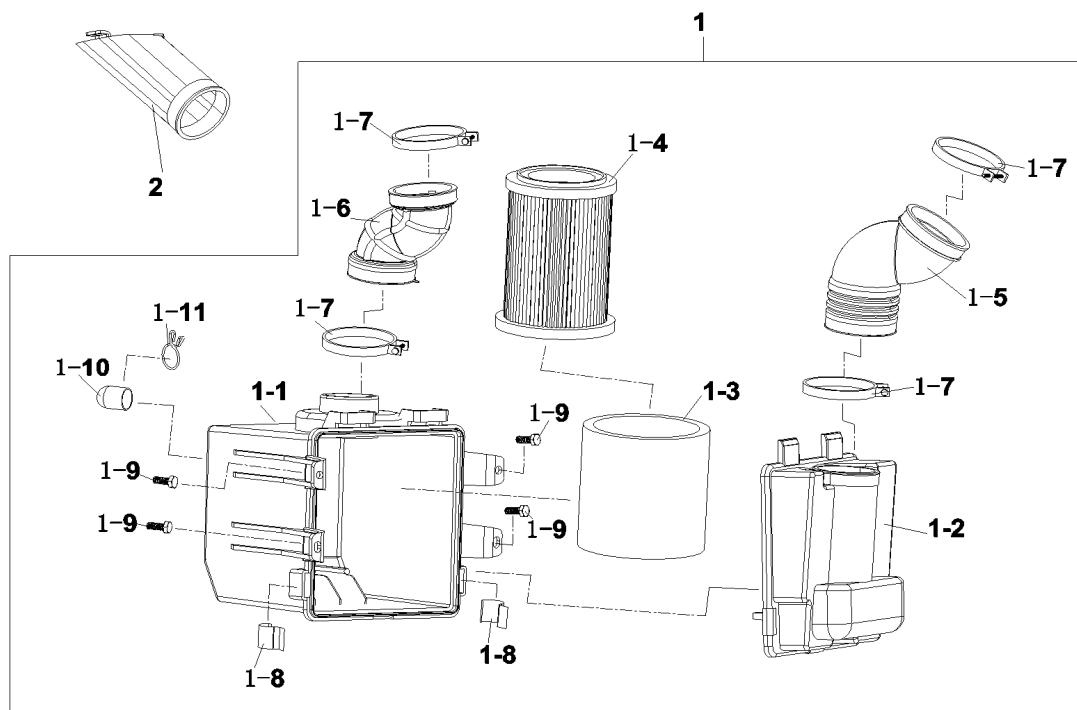


17-1	115000-0130010	Air Filter Assy	1
17-1-1		Air Filter Body	1
17-1-2		Air Filter Cover	1
17-1-3		Arrester-Flame	1
17-1-4		Element-Air Filter	1
17-1-5		Duct, Carburetor	1
17-1-6		Outlet Duct	1
17-1-7		Hoop	4
17-1-8		Clamp	2
17-1-9		Internal Hexagonal Bolt M6*16	4
17-1-10		Boot	1
17-1-11		Clamp	1
17-2	115005-0060010	Outlet Pipe	1

 FIG.18 (Fuel Tank)

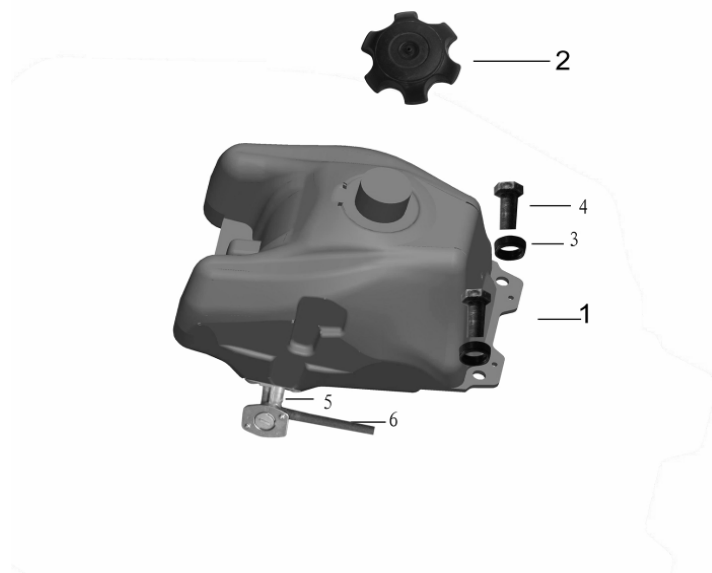


18-1	801500-0110010	Fuel Tank Assy	1
18-2		Cover of Fuel Tank	1
18-3		Shock Absorber Bushing	1
18-4		Bolt GB5787.M6X30	2
18-5		Fuel Switch	1
18-6		Fuel Pipe	1

 FIG.19 (Exhaust System)

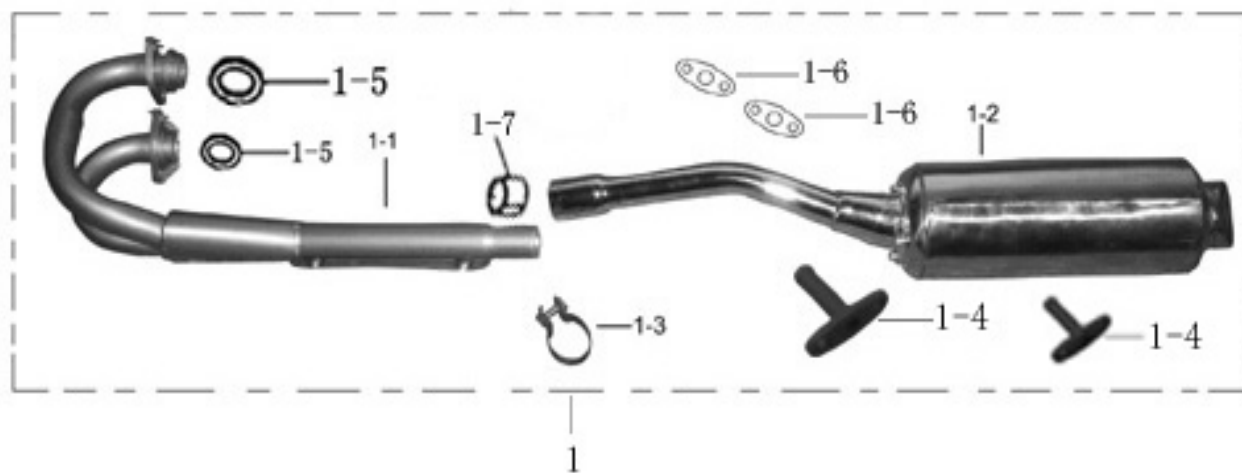


19-1		Exhaust Assy	1
19-1-1	117200-0100020	Front Part of Exhaust	1
19-1-2	117300-0070020	Rear Part of Exhuast	1
19-1-3	117500-0040010	Hoop	1
19-1-4			2
19-1-5			2
19-1-6			2
19-1-7			1

 FIG.20 (Air Induction System)

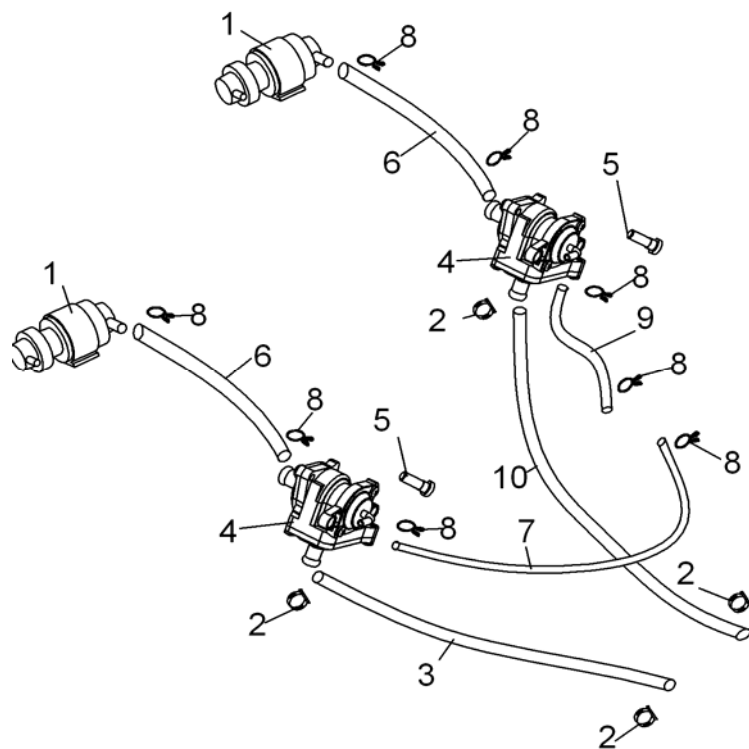


20-1	114201-0040010	AIR FILTER	2
20-2		CLAMP	4
20-3	114001-0010110	PIPE,AIR INDUCTION	1
20-4	114100-0040010	AIR INDUCTION SYSTEM ASSY	2
20-5		SCREW M6×20	2
20-6	114001-0010040	PIPE,AIR INDUCTION	2
20-7	911110-0070020	BREATHER PIPE	1
20-8		CLIP	6
20-9	911110-0070010	BREATHER PIPE	1
20-10	114001-0010100	PIPE,AIR INDUCTION	1
20-11	911110-0050040	BREATHER PIPE	1

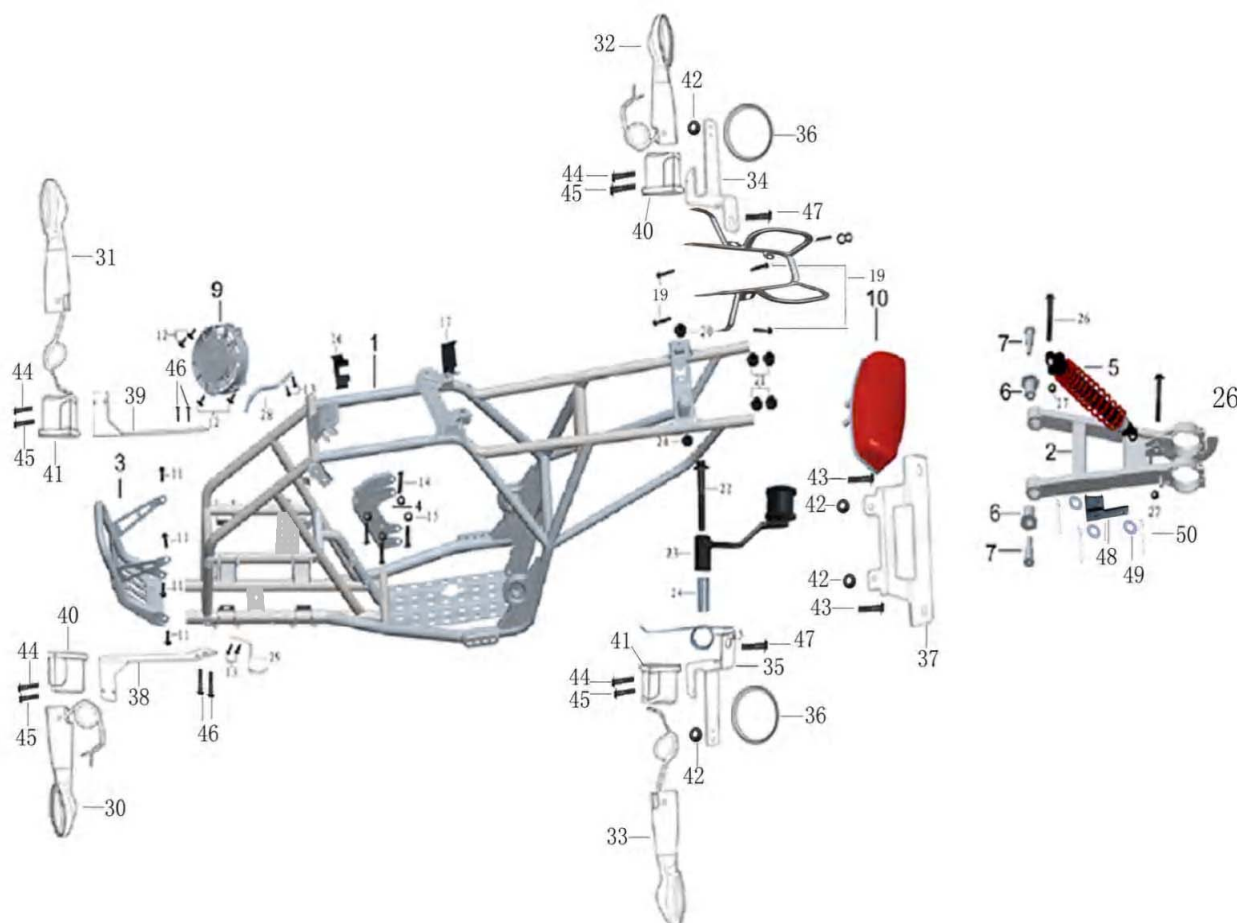 FIG.21 (Frame, Fork, rear Shock Absorber)

21-1	501100-0150010	Frame	1
21-2	508000-0100010	Fork	1
21-3	519100-0070010	front Bumper	1
21-4	5010010-0030010	Engine Suspension	1
21-5	506100-0120010	Rear Shock Absorber	1
21-6	508053-0020010	Fork Nut	2
21-7	508054-0020010	Fork Bolt	2
21-8	706000-0010010	Rear Armrest	1
21-9	343000-0020010	Fan	1
21-10	315000-0080010	Rear Light	1
21-10-1			1
21-11		Bolt GB5787.M8*16	4
21-12		Bolt GB5787.M6*12	4
21-13		Bolt GB5787.M6*20	4
21-14		Bolt GB5787.M6*65	4
21-15		Bolt GB6187.8	5
21-16	801083-0030010	Oil tank Washer(front)	1
21-17	801083-0030020	Oil tank Washer(rear)	1
21-18		Bolt GB5787.M8*20	2
21-19		Bolt GB5787.M10*16	2
21-20	314072-0020010	Shock Washer	2
21-21	315008-0020010	Rear Light Washer	4
21-22		Bolt GB5787.M8*60	1
21-23		Tensioner	1


21-24	912246-0020010	Tensioner Bushing	1
21-25		Tensioner Sping	1
21-26		Bolt GB5782.M12*55	1
21-27		Bolt GB6187.M12	1
21-28	806089-0040010	Front Cover Frame (left)	1
21-29	806090-0030010	Front Cover Frame (right)	1
21-30	316000-0060020	Front turn light.L	1
21-31	317000-0040020	Front turn light.R	1
21-32	318000-0040020	Rear turn light.R	1
21-33	319000-0040020	Rear turn light.L	1
21-34	319071-0010020	Rear turn light bracket.R	1
21-35	318071-0010020	Rear turn light bracket.L	1
21-36	310000-0010060	Reflector	2
21-37	807072-0050010	Bracket,license plate	1
21-38	316071-0010020	Bracket,Front turn light.L	1
21-39	317071-0010020	Bracket,Front turn light.R	1
21-40	316002-0010010		2
21-41	317072-0010010		2
21-42		NUT , M6	4
21-43		BOLT , M6x16	
21-44		BOLT , M6x20	
21-45		BOLT , M6x12	
21-46		BOLT , M6x12	
21-47		BOLT , M6x16	
21-48	508071-0060010		1
21-49			
21-50			

 FIG.22 (Steering)

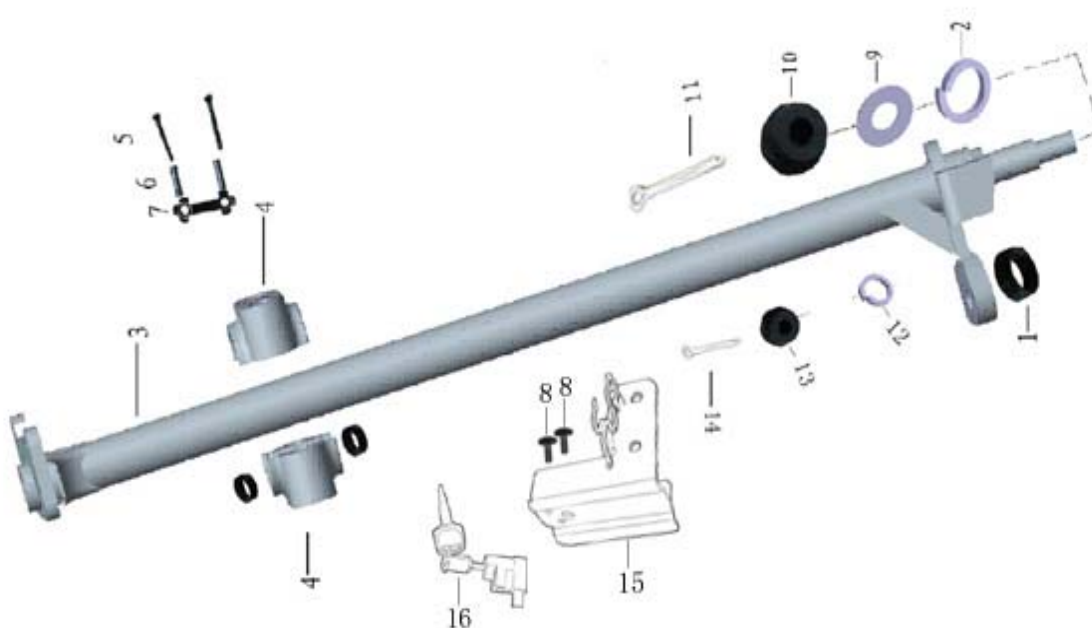

22-1	611014-0020010	Steering Vertical Pole Dust Washer	1
22-2		Spring Shim GB93Φ12	1
22-3	611000-0100010	Steering Vertical Pole	1
22-4	611018-0030010	Steering Vertical Pole Clip	2
22-5		Bolt GB5782.M8*75	2
22-6	611021-0030010	Steering Clip Bushing	2
22-7	611020-0020010	Locking Shim	1
22-8		Bolt	2
22-9		Shim GB96.Φ12	1
22-10		Nut GB6187.M12	1
22-11		Cotter Pin	1
22-12		Spring Shim GB93Φ10	1
22-13		Nut GB6187.M10	
22-14		Cotter Pin	1
22-15	611022-0010020	Bracket,Oriental lock	
22-16	612100-0010010	Oriental lock	1

 
FIG.23 (Front Suspension)

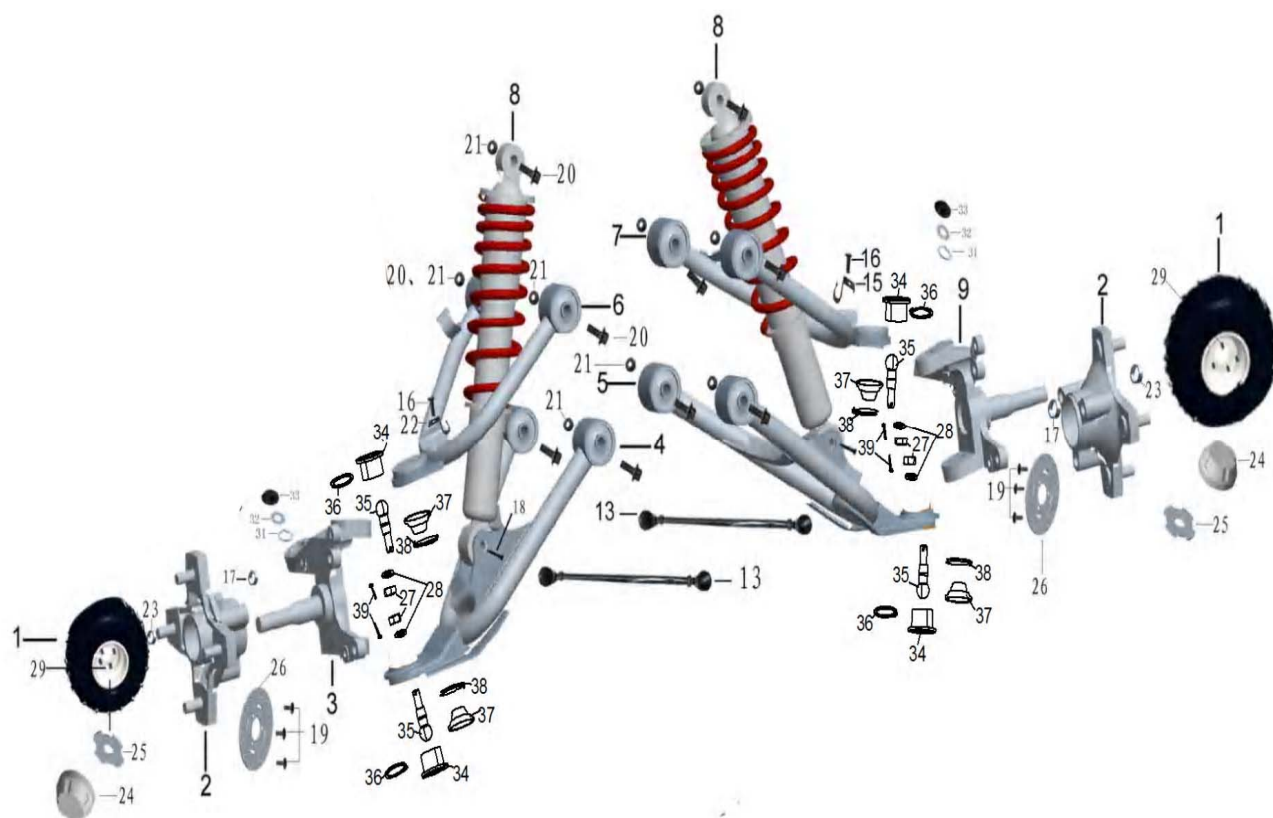

23-1	4020010-0040010	Front Tire	2
23-2	401072-0010010	Connecting Plate of Front wheel	2
23-3	525500-0050010	Right Slewing Journal	1
23-4	525302-0050010	Under of Front Right Wheel Fork	1
23-5	525205-0050010	Under of Front left Wheel Fork	1
23-6	525301-0020010	Up of Front Right Wheel Fork	1
23-7	525204-0040010	Up of Front left Wheel Fork	1
23-8	505100-0100010	Front Shock Absorber	2
23-9	525400-0050010	Left Slewing Journal	1
23-13	611500-0050010	Steering Tension Rod Assy	2
23-14		Dis Brake Plate Cover	2
23-15	818307-0030020	Right Block Line	1
23-16		Bolt GB5789.M6*12	2
23-17	525471-2126010	Bushing	2
23-19		Internal Hexagonal Step Bolt M8*20	2
23-20		Bolt GB5787.M10*40	2
23-21		Bolt GB6187.M10	8
23-22	818307-0030010	Left Block Line	1
23-23	525471-1521010	Bushing	2
23-24	401107-0040010	Front wheel Dust Cover	2
23-25	912227-1950018	Front wheel Dust Cover shim	2
23-26	409001-0050010	Front Dis Brake Plate	2
23-27		Spring Shim GB93Φ10	4
23-28		Nut GB6187.M10*1	6
23-29	401100-0040010	Front wheel Ring	2
23-30		nut	8
23-31		Spring Shim GB93Φ10	4

23-32		Nut	4
23-33		Cotter Pin	4
23-34		Dust cap	4
23-35			4
23-36		Circlip	4
23-37			4
23-38		Spring Clamp	4
23-39		Cotter Pin	4

 
FIG.24 (Brake)

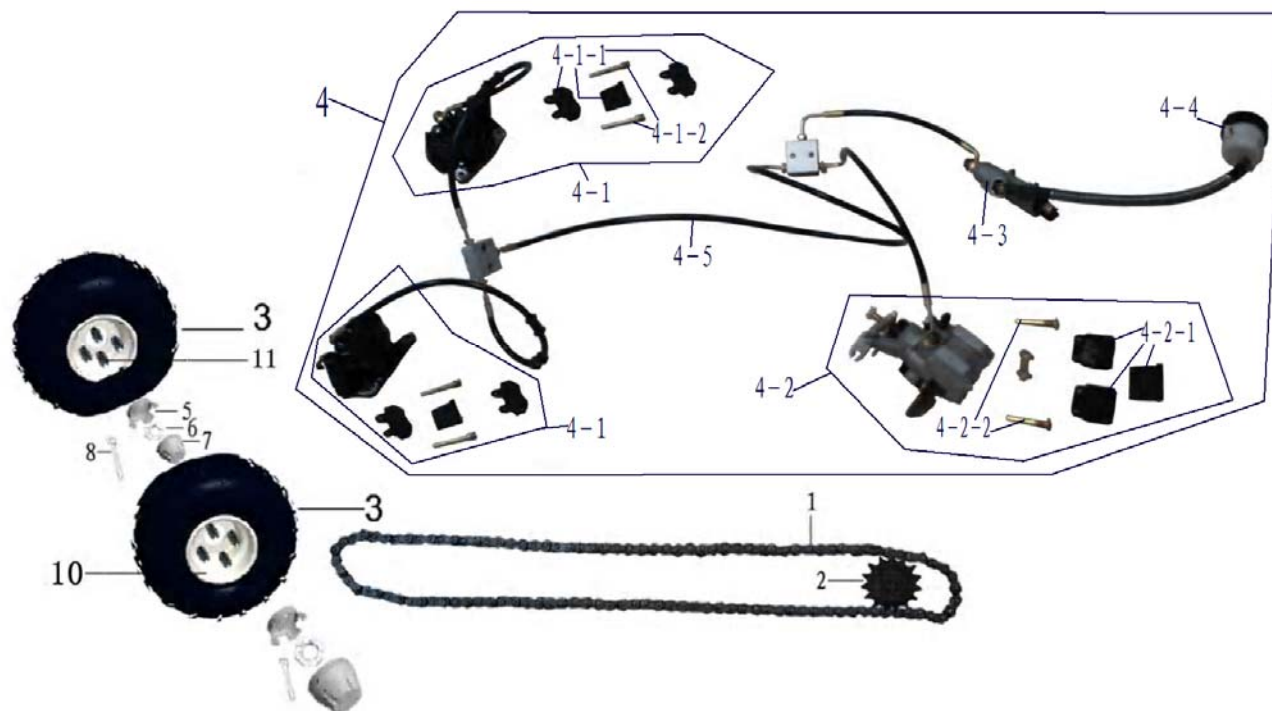

24-1	203100-0060010	Chain	1
24-2		Chain Ring	1
24-3	101001-0040010	Rear Wheel Tire	2
24-4			1
24-4 - 1		Front Brake caliper assembly	2
24-4 - 1 - 1		Front Brake pad/insulator/pad shim	6
24-4 - 1 - 2		Front Brake pad holding bolt	4
24-4 - 2		Rear Brake caliper assembly	1
24-4 - 2 - 1		Rear Brake pad/insulator/pad shim	3
24-4 - 2 - 2		Rear Brake pad holding bolt	2
24-4 - 3		Brake master cylinder	1
24-4 - 4		Brake fluid reservoir	1
24-4 - 5		Brake fluid reservoir hose	
24-5	403107-0020010	Rear Wheel Dust Cover shim	2
24-6		Notch Nut M16*1.25	2
24-7	403107-0020010	Rear Wheel Dust Cover	2
24-8		Cotter Pin $\Phi 3 \times 30$	2
24-10		rear hub	2
24-11		nut	8


FIG.25 (Brake arm)

 Brake Arm

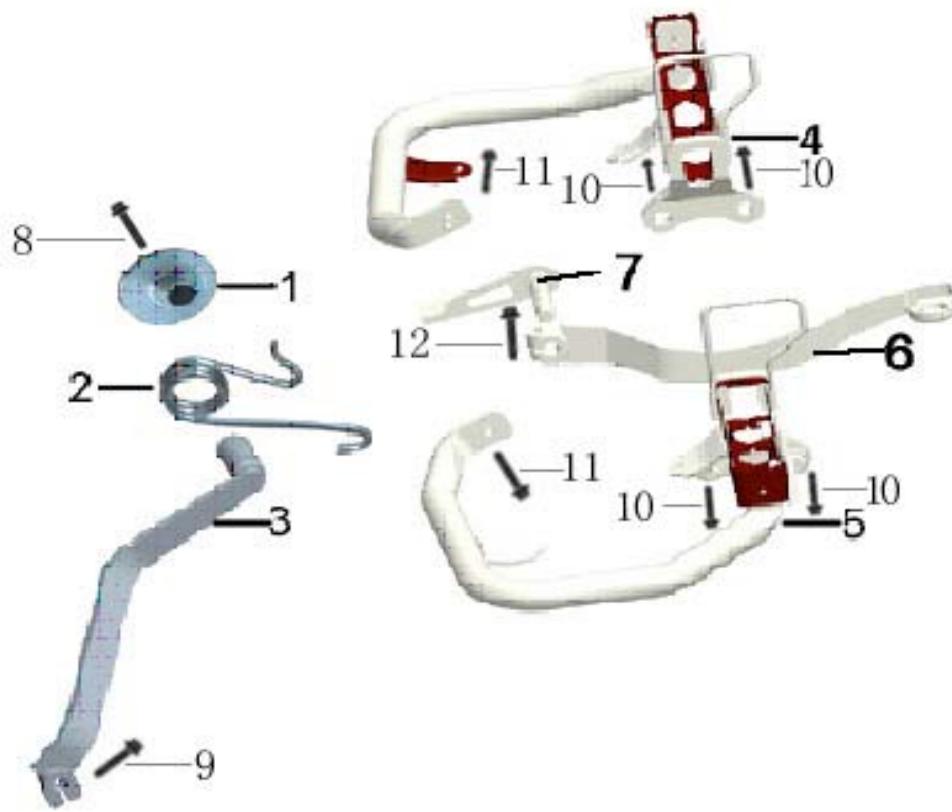


25-1		Return Spring of Brake Bushing	1
25-2		Return Spring of Brake	1
25-3	201100-0070010	Arm of Shift	1
25-4	511000-0060010	Left Bracket Assy	1
25-5	512000-0060010	Right Bracket Assy	1
25-6	408201-0090010	Arm of Brake	1
25-7	408101-0070010	Push Pole of Brake	1
25-8		Bolt 6*25	1
25-9		Bolt 6*20	1
25-10		Bolt 10*21	4
25-11		Bolt 8*16	2
25-12		Bolt 8*30	1
25-13			1

 FIG.26 (rear axle)

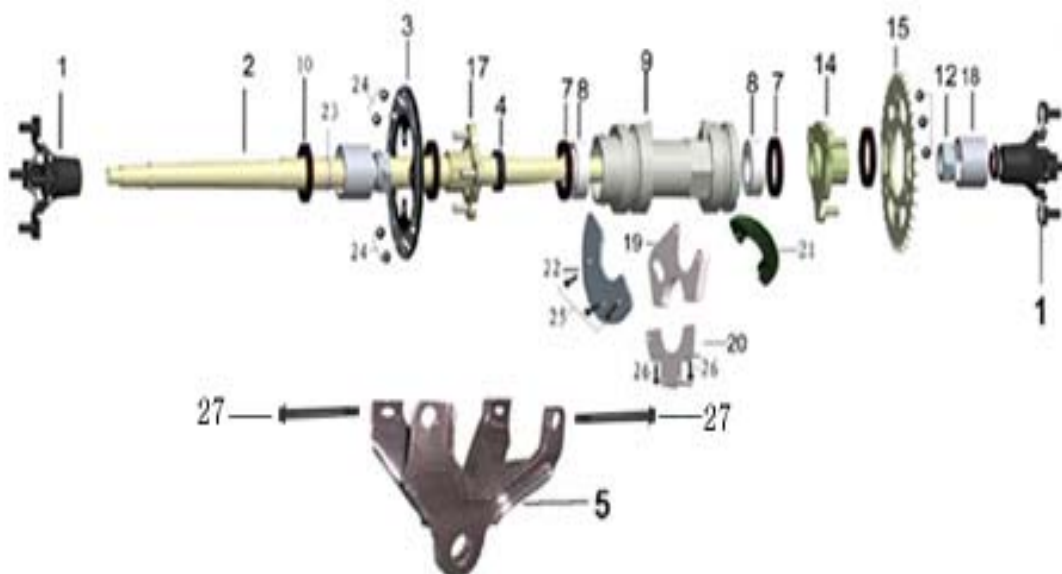

26-1	403071-0060010	Rear Wheel Connecting Plate	2
26-2	204204-0070010	Rear Bridge Axis	1
26-3	411001-0060010	Rear Dis Brake Plate	1
26-4	204216-0020010	Washer	1
26-5		Fork of Trail Ball	1
26-7	26-9-1	Oil Seal	2
26-8	26-9-2	Bearing3307	2
26-9	206101-0070010	Rear Bridge Rind	1
26-12	204225-0020010	Rear Wheel Axis Nut	2
26-14	405101-0070010	Seat of Chain Plate	1
26-15	405201-0070010	Chain Plate	1
26-17	411074-0060010	Seat of Dis Brake Plate	1
26-18	508050-0030010	Nut of Stop Back Cover	2
26-19	411072-0050010	Upper Seat of Dis Brake	1
26-20	411072-0050020	Down Seat of Dis Brake	1
26-21	405271-0010010	Protect Rack of Chain Wheel	1
26-22	411075-0020010	Protect Rack of Dis Brake	1
26-23	GB/T895.2 32	Lock Circle	1
26-24		Nut GB6187.M10	7
26-25		Internal Hexagonal Bolt M8*20	3
26-26		Bolt GB5787.M8X60	2
26-27		Bolt GB5787.M10X95	2

 
FIG.27 (Throttle Lever - Steering Bar Tube)

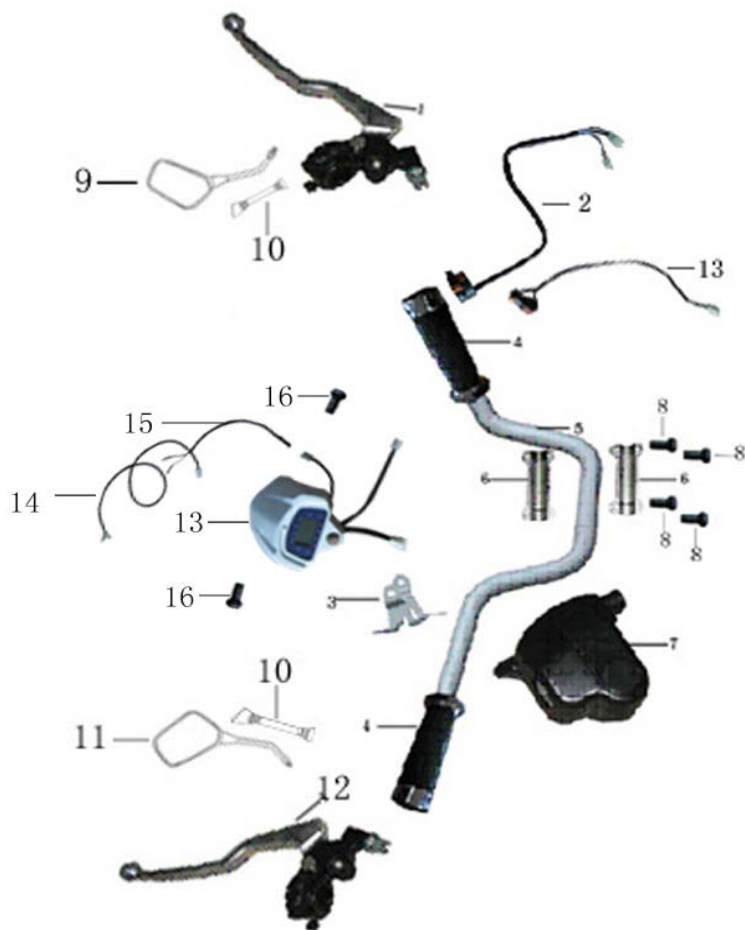

27-1	603000-0080010	Clutch Lever	1
27-2	324200-0100010	Switch Assy	1
27-3	812491-0020010	Rack of Desk Cover	1
27-4	602100-0070010	Handle Bar	2
27-5	6010010-0080010	Steering Bar Tube	1
27-6	611001-0060010	Steering Bar Clip	2
27-7	324330-0070010	Throttle Lever	1
27-8	D10670-16LZ	bolt	4
27-9	902100-0050010	Rear reflect,L	1
27-10	902171-0010010		2
27-11	902200-0050010	Rear reflect,R	1
27-12	604000-0060010	Handle Bar,R	
27-13	323000-0060020	Meter	1
27-14	308001-0030010		1
27-15	204075-0030010	Speed Sensor	1
27-16	D10412-16LZ		1

FIG.28 (Electric Assy)

 Electric Assy

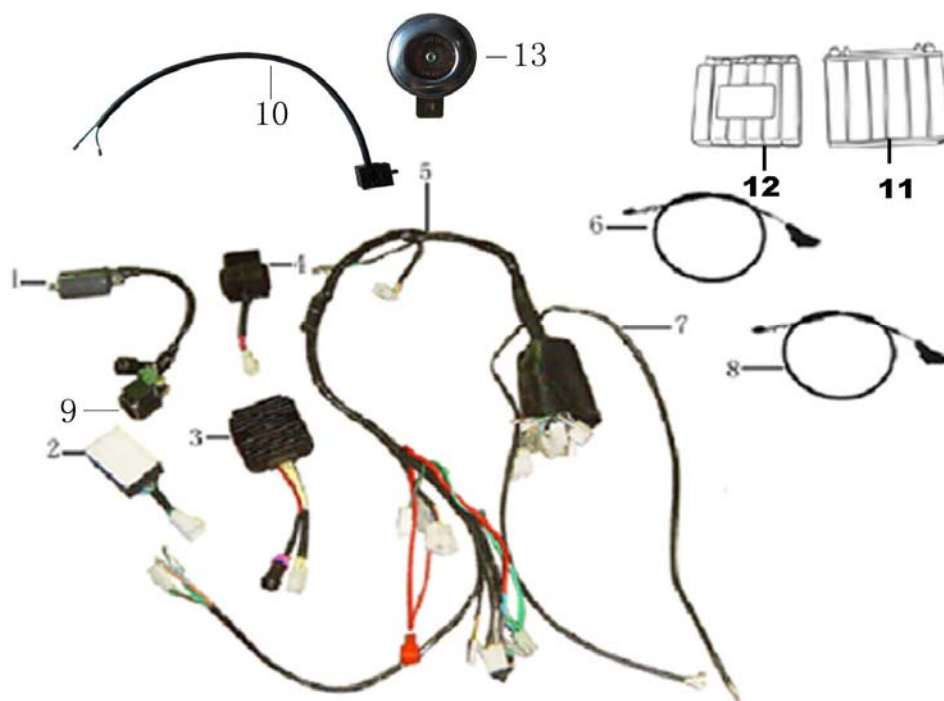


28-1	305000-0130010	high voltage coil	1
28-2	306000-0110010	PEI Ignition unit	1
28-3	302000-0090010	Rectification regulator	1
28-4	301000-0020010	Start Relay	1
28-5	307000-0270010	Main Cable	1
28-6	606000-0050010	Clutch Cable	1
28-7		Clutch Switch Cable	1
28-8	607000-0140010	Accelerograph Lever	1
28-9	608000-0060010	Choke Lever	1
28-10	610000-0100010	Brake Switch Lever	1
28-11	303000-0060010	battery	1
28-12			
28-13	312000-0040010	Horn	1

FIG.29 (seat)



29-1		Seat Assy	1
------	--	-----------	---

 FIG.30 (Cover assy)

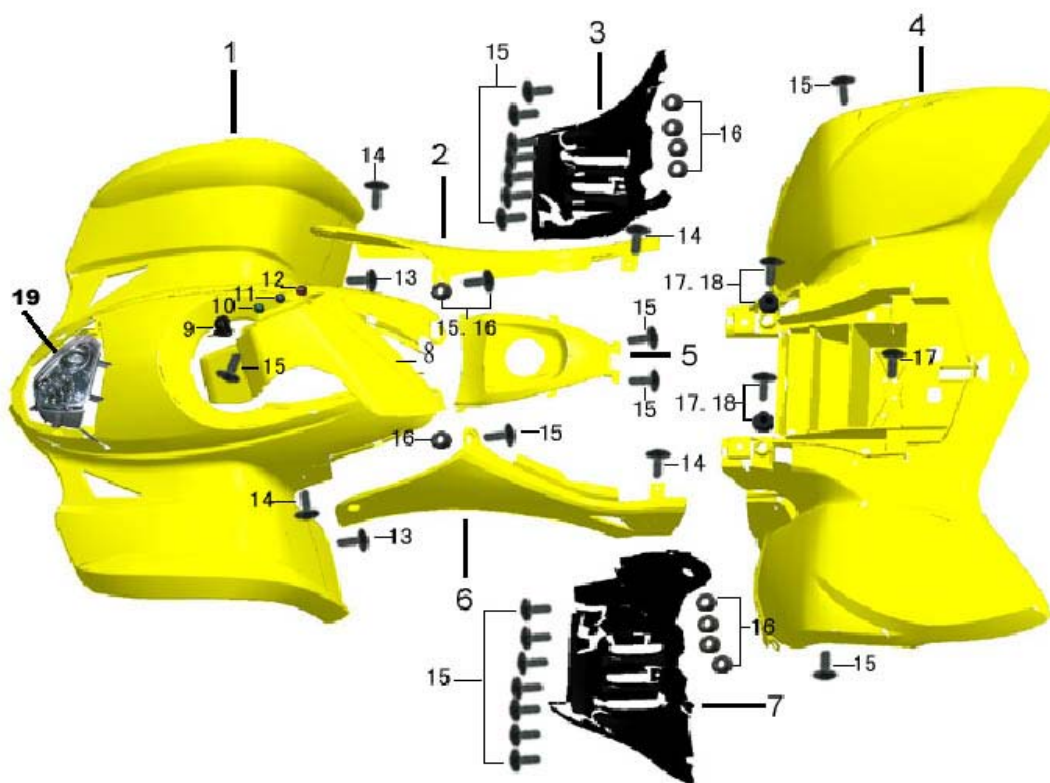

30-1	806100-0090010	Front Cover	1
30-2	801303-0030010	Right Oil Tank Cover	1
30-3	807055-0020010	Right Protecting Plate of Rear Cover	1
30-4	807000-0090010	Rear Cover	1
30-5	801303-0030010	Oil Tank Plate	1
30-6	801302-0030010	Left Oil Tank Cover	1
30-7	807054-0020010	Left Protecting Plate of Rear Cover	1
30-8	812490-0030010	Desk Cover	1
30-9	324100-0020010	Ignition Switch	1
30-10	307082-0020010	Cover of Neutral Indicator	1
30-11	307085-0020010	Cover of Reverse Indicator	1
30-12	307088-0020010	Cover of high Beam Indicator	1
30-13		Big Internal Hexagonal Bolt M6*16	20
30-14		Expansion Screw	4
30-15		Big Internal Hexagonal Bolt M6*12	6
30-16		Nut GB6177.M6	10
30-17		Big Internal Hexagonal Bolt M8*20	3
30-18	807083-0010010	Shock Washer	2
30-19		head light	1
30-19-1		bulb,near	1
30-19-2		bulb,far	1
30-19-3		bulb,position	1
31-1			1